


**be in motion be in motion**

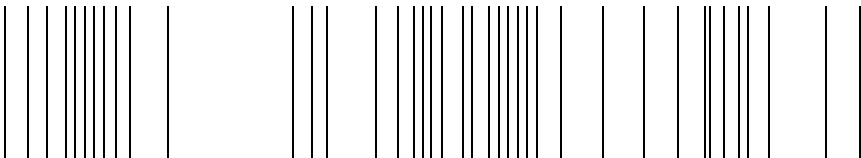

**BUC64 S/A/F**

**Feed/Feedback Unit with  
analog Controller**

**Manual**

**E**

5.02024.03a



Title	Manual
Product	Feed/Feedback Unit with analog Controller BUC64 S/A/F
Version	5.02024.03a
Status	2005-01-11
Copyright	<p>These operating instructions may be copied by the owner in any quantity but only for internal use. For other purposes these operating instructions and extracts thereof must not be copied or reproduced.</p> <p>Use and disclosure of information contained in these operating instructions are not permitted.</p> <p>Designations and company marks contained in these operating instructions may be brand names, the use of which by third parties for their own purposes may violate the rights of the holders.</p>
Obligatory	<p>These operating instructions are part of the equipment/machine. These operating instructions must be available to the operator at all times and must be in a legible condition. If the equipment/machine is sold or moved to a different location these operating instructions must be passed on by the owner together with the equipment/machine.</p> <p>After any sale of the equipment/machine this original and all copies must be handed over to the buyer. After disposal or any other end of use this original and all copies must be destroyed.</p> <p>When the present operating instructions are handed over, corresponding sets of operating instructions of a previous version are automatically invalidated. Please notice that specifications/data/information are <b>current values according to the printing date</b>. These statements are <b>not legally binding</b> according to the measurement, computation and calculations.</p> <p>Baumüller Nürnberg GmbH reserves the right, in developing its products further, to change the technical specifications and the handling of the products concerned without prior notice.</p> <p>No liability can be accepted concerning the correctness of the operating instructions unless otherwise specified in the General Conditions of Sale and Delivery.</p>
Manufacturer	<p>Baumüller Nürnberg GmbH Ostendstr. 80 - 90 D-90482 Nürnberg Germany Tel. +49 9 11 54 32 - 0 Fax: +49 9 11 54 32 - 1 30 <a href="http://www.baumueller.de">www.baumueller.de</a></p>



# Table of contents

<b>1</b>	<b>Introduction</b>	<b>7</b>
1.1	First steps	7
1.2	Terms used	7
1.3	Obligation and liability	7
1.3.1	Observing danger- and safety information	7
1.3.2	Dangers when handling this appliance	8
1.3.3	Guarantee and liability	8
<b>2</b>	<b>Fundamental security information</b>	<b>11</b>
2.1	Hazard information and commands	11
2.1.1	Hazard information structure	12
2.1.2	Form of the hazard sign (triangular or round)	13
2.1.2.1	Hazard information on personal injury	13
2.1.2.2	Hazard information on property damage	18
2.1.2.3	Command signs used	18
2.2	Information sign	19
2.3	Application according to the terms	19
2.4	Non-appropriate application	19
2.5	Reconstructing the appliance	20
2.6	Disposal of the appliance	20
2.7	Fire fighting	21
<b>3</b>	<b>Packing and Transport</b>	<b>23</b>
3.1	Transport	23
3.2	Unpacking	23
3.3	Disposal of the packaging	24
3.4	Transportation precautions	24
<b>4</b>	<b>Description of the Unit</b>	<b>25</b>
4.1	Charging circuit for the DC link	25
4.2	Variants	26
4.3	Overview of hazardous areas	27
4.4	Characteristics of the unit - type key	28
4.5	Block switching diagrams	29
4.6	Construction diagram	31
4.7	Example for PowerOn/Off control	33
<b>5</b>	<b>Mounting</b>	<b>35</b>
5.1	Hazardous areas during mounting	35
5.2	Mounting steps	36
5.2.1	Select a switching cabinet	36
5.2.1.1	Space requirements - dimensional drawings	37
5.3	Producing the drill holes/threaded holes and the cut-out	38
5.4	Mounting the unit	39
5.4.1	BUC64S mounting	39
5.4.2	Mounting BUC64 window variant A/F	41
5.4.2.1	Coolant	43
5.4.2.2	Connecting the coolant circulation	44



## Table of contents

---

<b>6</b>	<b>Installation</b>	<b>45</b>
6.1	General hazard information	45
6.1.1	Voltage test	47
6.2	Hazardous areas at installation	47
6.3	Cable requirements	47
6.4	Connections	48
6.4.1	Power terminals	48
6.4.2	Control connections	49
6.4.2.1	Control terminal X99A	50
6.4.2.2	Control terminal X99AB	51
6.4.2.3	X1 connection of the charging circuit	52
6.4.2.4	LED display	53
6.5	EMC requirements on cable routing (EMC information)	54
6.5.1	German EMC law (EMVG)	54
6.5.2	Measures to ensure EMC	54
6.5.2.1	Cabling	54
6.5.2.2	Grounding	57
6.5.2.3	Screening	58
6.5.2.4	Discharge currents	59
6.6	Connection diagram	60
<b>7</b>	<b>Commissioning</b>	<b>63</b>
7.1	Requirements the executing personnel must meet	63
7.2	Checking the mounting	64
7.3	Checking the installation	64
7.4	Checking the safety devices	65
7.5	Appliance start-up	65
7.5.1	Step-by-step starting	66
<b>8</b>	<b>Operation</b>	<b>67</b>
8.1	Safety instructions	67
8.2	Switch-on	67
8.3	Monitoring functions and „ready-for-use“	68
8.4	Monitoring functions	68
8.5	Ready-for-use	69
8.6	Pre-warning error	72
8.6.1	Power unit temperature	72
8.6.2	PLL synchronous	72
<b>9</b>	<b>Maintenance</b>	<b>73</b>
9.1	Inspection interval	73
<b>10</b>	<b>Repair</b>	<b>75</b>
<b>11</b>	<b>Setting out of Operation, storage</b>	<b>77</b>
11.1	Demands on the personnel	77
11.2	Safety regulations	77
11.3	Setting out of operation	78
11.4	Demounting	78
11.5	Storage conditions	78
11.6	Maintenance during the storage	78
11.7	Re-commissioning	78
<b>12</b>	<b>Disposal</b>	<b>79</b>
12.1	Safety regulations	79
12.2	Demands on the personnel	79



12.3	Disposal instructions . . . . .	80
12.3.1	Modules . . . . .	80
12.4	Recycling plants / offices . . . . .	81
<b>Appendix A - Abbreviations . . . . .</b>		<b>83</b>
<b>Appendix B - Accessories . . . . .</b>		<b>87</b>
B.1	EMC accessories . . . . .	87
B.2	Connectors . . . . .	88
B.2.1	Semic line fuse (F3, ▶Figure 4◀ on page 29) . . . . .	88
B.3	Line reactor . . . . .	89
B.4	Water cooler . . . . .	89
<b>Appendix C - Declaration of Conformity / Manufacturer . . . . .</b>		<b>91</b>
C.1	What is an EU directive? . . . . .	91
C.2	What the CE symbol indicates . . . . .	91
C.3	Definition of the term Declaration of Conformity . . . . .	92
C.4	Definition of the term Declaration by Manufacturer . . . . .	92
C.5	Declaration of Conformity . . . . .	93
C.6	Declaration by Manufacturer . . . . .	94
<b>Appendix D - Technical Specifications . . . . .</b>		<b>95</b>
D.1	Requirements on the power supply . . . . .	95
D.2	Burst immunity . . . . .	95
D.3	Required environmental conditions . . . . .	96
D.4	Electrical specifications . . . . .	98
D.5	BUC64S - non-electrical data . . . . .	99
D.6	BUC64A - non-electrical data . . . . .	99
D.7	BUC64F - non-electrical data . . . . .	99
D.8	Cable for control voltage supply / signals . . . . .	100
D.9	Cable for mains supply to appliance . . . . .	100
<b>Table of figures . . . . .</b>		<b>101</b>
<b>Index . . . . .</b>		<b>103</b>



## Table of contents

---

# 1

## INTRODUCTION

In this chapter we describe the first steps you should carry out after you have received your appliance. We will give you a definition of terms used throughout this documentation and we will give you information about what must be observed when using this appliance.

### 1.1 First steps

---

- 1 check the scope of delivery, see [►Packing and Transport◄](#) from page 23.
- 2 pass on the supplied documentation to the respective departments
- 3 take care of suitable personnel for mounting, installation and commissioning.
- 4 hand over this manual to the personnel for mounting, installation and commissioning. Make sure, that particularly the safety information is understood and will be observed.

### 1.2 Terms used

---

In this documentation for the Baumüller product "Feed/Feed back unit with analogue controller" we will also use the term "appliance". In the appendix you will find a list of all terms used, see [►Appendix A - Abbreviations◄](#) from page 83

### 1.3 Obligation and liability

---

In order to enable you to run this appliance with maximum safety it is essential that you know and obey the danger- and safety information given in this documentation.

#### 1.3.1 Observing danger- and safety information

---

To keep you from damage of personnel and property we will use unified danger information signs in this documentation.



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

All persons, who work at or with this appliance, must have knowledge of and observe all hazard and security information given in this manual.

Furthermore all persons who work with this appliance must in addition know and observe all local instructions and regulations.

### 1.3.2 Dangers when handling this appliance

---

This "Feed/Feed back unit with analogue controller" appliance has been developed and produced according to the state-of-the-art technics also keeping the respective guidelines and standards. Still the handling of the appliance can hold dangers. An overview of possible dangers you will find in chapter [▶Fundamental security information◀](#) from page 11. When there is a hazard you will always find a detailed security information at the respective location.

### 1.3.3 Guarantee and liability

---

The "Terms of sale and delivery" of Baumüller Nürnberg GmbH are applied generally. These you have available at last since the contract was assured. Claims of guarantee or liability towards Baumüller Nürnberg GmbH are rejected if one or more of the examples listed below has/have been the cause of the damage/s:

- you have disregarded the information given in this manual
- you have used this appliance within a non-appropriate application
- this appliance you have
  - unskillfully mounted
  - unskillfully connected
  - unskillfully commissioned
  - unskillfully operated
  - unskillfully or not maintained
  - let be mounted, connected, commissioned, operated and/or maintained by not or not adequate qualified personnel
  - overloaded
- operated it with
  - defective security devices
  - not properly mounted or without security devices
  - not efficient safety- and protection devices
  - environmental conditions being not within the specified values
- you have reconstructed this appliance without written permission of Baumüller Nürnberg GmbH.
- you have disregarded instructions concerning maintenance in the component manuals
- you have failed to monitor parts of wear and tear properly
- you have carried out a repair job unskillfully



- you have unskillfully combined the appliance with products of other manufacturers
- you have combined the drive system with defective and/or incorrectly documented products of other manufacturers

The “General terms of sale and delivery“ of Baumüller Nürnberg GmbH apply generally. Those you have available at least since the contract has been confirmed.



# 2

## FUNDAMENTAL SECURITY INFORMATION

Every Baumüller appliance was constructed and produced under strict safety guidelines. Nevertheless working with the appliance can still be dangerous for you.

In this chapter we describe the possible dangers which may occur when you work with this Baumüller appliance. Dangers are indicated within this documentation by symbols (icons). All the symbols used in this documentation you will find listed and explained below.

How you can protect yourself against every single danger in detail, we however cannot state in this chapter. Here only information about general safety measures will be given to you. The respective safety measures against an occurring hazardous situation you will find in the following chapters always directly where the hazard arises.

### 2.1 Hazard information and commands

---



---

Hazard information shows you the dangers, which can cause injuries or even your death.

**Please always consider the hazard information which is given to you in this documentation.**

---

## 2.1 Hazard information and commands

---

Each hazard is classified in one of three different hazard classes. Every hazard class has one of the following characteristic signal words:

### DANGER

- serious property damage
- serious personal injury
- death - **will** occur

### WARNING

- serious property damage
- serious personal injury
- death - **may** occur


### CAUTION

- minor to medium personal injury or
- environmental pollution or
- property damage - **may** occur

### 2.1.1 Hazard information structure


---

The following two examples show you how the hazard informations are constructed. The triangle is used when indicating a hazard for human beings. When there is a circle instead of the triangle, the hazard information is only for possible property damage.



A triangle indicates hazard for human beings.

The shade of grey of the outline reflects the severity of the hazard - darker grey means rising hazard.



The icon within the square illustrates the hazard.

The outline's shade of grey reflects the severity of the hazard - darker grey means rising hazard. (Not every hazard information has a square representing the hazard, so we have shown it as draft here)



The icon in the circle represents a command.

(Not every hazard information has a circle representing the hazard, so we have shown it as draft here)



The circle indicates hazard for property.



The icon within the square illustrates the hazard.

The outline's shade of grey reflects the severity of the hazard - darker grey means rising hazard. (Not every hazard information has a square representing the hazard, so we have shown it as draft here)

The text beneath the icons is constructed as follows:

---

### HERE STANDS THE SIGNAL WORD WHICH INDICATES THE DEGREE OF THE HAZARD

Here we tell if one or more of the consequences described lower will occur if this hazard information is not observed.

- here we describe the possible consequences. The worst consequence stands on the right side.




*Here we describe the hazard.*


Here we describe what you can do to avoid this hazard.

---

### 2.1.2 Form of the hazard sign (triangular or round)

---

If there is a triangle like  or  or  in front of the signal word, the hazard information is referring to personal damage.

If there is a round hazard signal like  in front of the signal word, the hazard information is referring to property damage.

#### 2.1.2.1 Hazard information on personal injury

---

To distinguish each class of hazard information, we use a characteristic outline for both the triangular hazard signs and the square-form icons

For the hazard class **DANGER** we use the  danger sign. The hazard information of this hazard class we use in this documentation is listed below:

#### DANGER



The following **will occur**, if you do not observe this danger information:

- serious personal injury
- death

*The hazard is: **electricity**. Here the hazard may be described in detail.*



Here we describe what you can do to avoid the hazard.

---

#### DANGER



The following **will occur**, if you do not observe this danger information:

- serious personal injury
- death

*The hazard is: **mechanical influence**. Here the hazard may be described in detail.*




Here we describe what you can do to avoid the hazard.

---

## 2.1 Hazard information and commands

---

For the hazard class **WARNING** we use the warning sign . The following hazard information of this hazard class we will use in this documentation.



### **WARNING**

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **electricity**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.



### **WARNING**

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **mechanical influence**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.



### **WARNING**

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **electro-conductive liquid together with electricity**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.



### **WARNING**

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **electro-magnetic radiation**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.





### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death




*The hazard is: **liquid coolant**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

## 2.1 Hazard information and commands

---

For the hazard class **CAUTION** we use the caution sign  when there is hazard for persons or of environmental pollution. The following hazard information of this hazard class we will use in this documentation.



### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **hot surface**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

---



### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **sharp edges**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

---



### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **rotating parts**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

---



### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **injury of the eye caused by ricocheting particles**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

---



**CAUTION**

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **noise**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

**CAUTION**

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **hazard of sliding caused by liquid**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.

**CAUTION**

The following **may occur**, if you do not observe this danger information:

- environmental pollution.

*The hazard is: **unadequate disposal**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.




## 2.1 Hazard information and commands

---

### 2.1.2.2 Hazard information on property damage

---

If there is a round caution sign  in front of the signal word, the safety information refers to property damage.



#### CAUTION

The following **may occur**, if you do not observe this caution information:

- property damage.

*The hazard is: **electro-static discharge**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.



#### CAUTION

The following **may occur**, if you do not observe this caution information:

- property damage.

*The hazard is: **damage of the coolant hose**. Here the hazard may be described in detail.*

Here we describe what you can do to avoid the hazard.



### 2.1.2.3 Command signs used

---



carry safety gloves



carry safety shoes



carry eye protection



carry ear protection



Use this fire extinguishing agent:  
ABC powder.

## 2.2 Information sign

---



### NOTE

This note is a very important information.

---

## 2.3 Application according to the terms

---

You must always use this appliance properly. Listed below you will find some important information. The information given is intended to give you some impression on how to operate this appliance according to the terms. The information below is not a complete list; you must always observe the information given throughout this documentation.

- project this application in a way, that the appliance is run within its specifications.
- take care that only qualified personnel is working with or at this appliance.
- mount this appliance only at a reasonable steady wall.
- install this appliance according to the way shown in this documentation.
- take care that the power supply always meets the requested specifications.
- operate this appliance only if it is in a correct technical state.
- operate this appliance always in an environment according to the information given in the “Technical specifications”.
- operate this appliance always in the regular condition.  
For safety reasons you are not allowed to reconstruct this appliance.
- observe all respective information given if you want to store this appliance.

You are using this appliance according to the terms, if you observe all notes and information given in this operating manual.

## 2.4 Non-appropriate application

---

Listed below you will find some examples of non-appropriate application. The information below is intended to give you some impression of what non-appropriate application is. However we cannot state all possible non-appropriate applications here. All applications, where the notes and information given in this documentation is disregarded, are non-appropriate and therefore forbidden.

Examples:

- you have disregarded the information given in this manual
- you have used this appliance within a non-appropriate application
- this appliance you have
  - unskillfully mounted
  - unskillfully connected
  - unskillfully commissioned
  - unskillfully operated
  - unskillfully or not maintained

## 2.5 Reconstructing the appliance

---

- let be mounted, connected, commissioned, operated and/or maintained by not or not adequate qualified personnel
- overloaded
- operated it with
  - defective security devices
  - not properly mounted or without security devices
  - not efficient safety- and protection devices
  - environmental conditions being not within the specified values
- you have reconstructed this appliance without written permission of Baumüller Nürnberg GmbH.
- you have disregarded instructions concerning maintenance in the component manuals
- you have failed to monitor parts of wear and tear properly
- you have carried out a repair job unskillfully
- you have unskillfully combined the appliance with products of other manufacturers
- you have combined the drive system with defective and/or incorrectly documented products of other manufacturers

The “General terms of sale and delivery“ of Baumüller Nürnberg GmbH apply generally. Those you have available at least since the contract has been confirmed.

- Education of the personnel



The appliances of Baumüller Nürnberg GmbH are only to be mounted, installed, operated and maintained by qualified personnel.

Qualified personnel

Qualified personnel are persons who have been authorized by the plant manager to carry out the activities required, who are able to recognize possible dangers and to avoid them. They must have the skills, experience, instruction and knowledge of the operational conditions and the respective standards, regulations and rules to detect and avoid accidents.

## 2.5 Reconstructing the appliance

---

Unauthorized reconstructions without written permission of Baumüller Nürnberg GmbH are not allowed.

## 2.6 Disposal of the appliance

---

The correct disposal of the appliance is described in [▶Disposal◀](#) from page 79.

## 2.7 Fire fighting

---



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The danger is: **electricity when using a conductive fire extinguishing medium.***



Use this fire extinguishing agent:

ABC powder

---



# 3

## PACKING AND TRANSPORT

Every Baumüller appliance we have packaged before shipping in a way, that makes becoming damaged while on transport very unlikely.

### 3.1 Transport

---

The units are packed at the factory in accordance with the order.

- ▶ avoid heavy shaking while on transport and severe bumping, e.g. when lowering, of the unit.

### 3.2 Unpacking

---

After delivery of the (still packaged) item:

- ▶ check if there are visible transportation damages!

if yes:

- ▶ report this to your deliverer. Request a written confirmation of your reclamation and make immediate contact with your local Baumüller Nürnberg GmbH representative.

if there is no transportation damage visible:

- ▶ open the packaging of the appliance.
- ▶ check the scope of delivery according to the delivery note.

The scope of delivery is:

- Product
- this operation manual including declaration of conformity/Declaration by manufacturer
- supplement and fixing material
- ▶ report a reclamation at your local Baumüller representative if the scope of delivery is incomplete or if there is a transportation damage.

## 3.3 Disposal of the packaging

---



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The danger is: **electricity**.*

Do not operate the appliance if you have detected or suppose a transportation damage.

In this case please contact Baumüller Nürnberg GmbH immediately.

---

## 3.3 Disposal of the packaging

---

The packaging consists of cardboard, plastics, metal pieces, corrugated cardboard and/or wood.

- ▶ Observe the local regulations of disposal if you dispose the packaging.

## 3.4 Transportation precautions

---

For the first transport the appliance has been packaged by the manufacturer. If you intend to transport the appliance yourself, make sure that the following conditions are kept throughout the whole transport:

- environmental class: 2 K 3
- temperature interval: - 30 °C to + 70 °C )
- maximum height of drop (packaged): 0.25 m



## DESCRIPTION OF THE UNIT

This device is a supply-/feedback unit with a B6-IGBT-transistor circuit, which has a series-connected line reactor. It converts power taken from the mains and supplies the DC-link of the connected BUS power modules (axes).



### NOTE

Do not use this appliance in populated areas (see EN 61800-3, 6.4.2.1), because this unit may cause high frequency interference.

### 4.1 Charging circuit for the DC link

The charging connection is an inherent component of the device and serves as a prevention against charging surge currents.

After precharging of the DC-link has been carried out, the charging connection is switched off and the line contactor is switched on over a device-internal contact at X1:6/7. The DC-link then is charged onto the DC-link nominal voltage. The relay contact X99AB: 1 / 2 "ready-for-use external" (BBext) is closed. At the same time over the transistor output X99A: 5 "ready-for-use internal" (Bbint) the ready-for-use message is routed to the connected device(s) (axis/axes).

The BUC control takes care of a constant DC-link voltage and guarantees a power factor in every operating point of  $\cos \varphi = 1$ .

#### Reset

With the reset X98AB: 5/6 (+24 V) error messages, which generate the basic unit are reset. A permanent reset may not be generated. However the reset signal must be present at least 50 ms.

### 4.2 Variants

The Feed/Feed back unit with analogue controller BUC64S/A/F is available in 3 variants, which differ in the cooling version (S/A/F):

- **S**: stands for **S**witching cabinet variant (air ventilation inside the switching cabinet)
- **A**: stands for window mounting variant **A** (air ventilation outside the switching cabinet)
- **F**: stands for window mounting variant **F** (water cooler outside the switching cabinet)

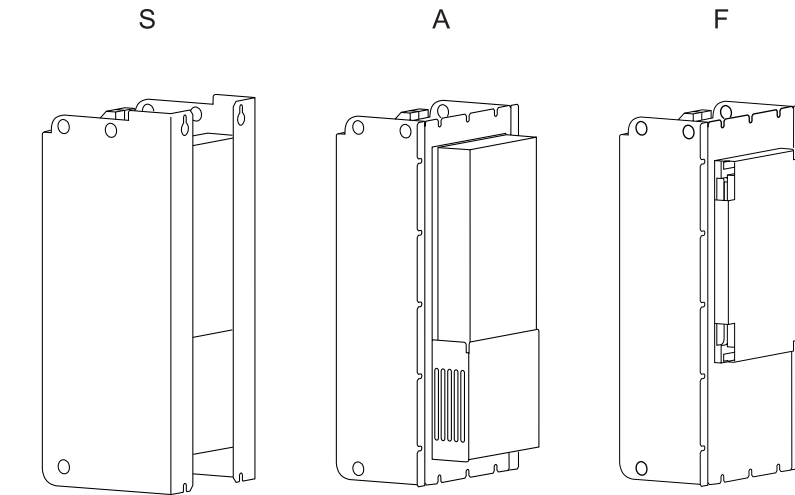


figure 1: Cooling variants

001\_rev01\_int.cdr

### 4.3 Overview of hazardous areas

The following figure shows the hazardous areas at each respective appliance. Use this overview to get informed about the existing hazardous areas when you learn to get familiar with this appliance.

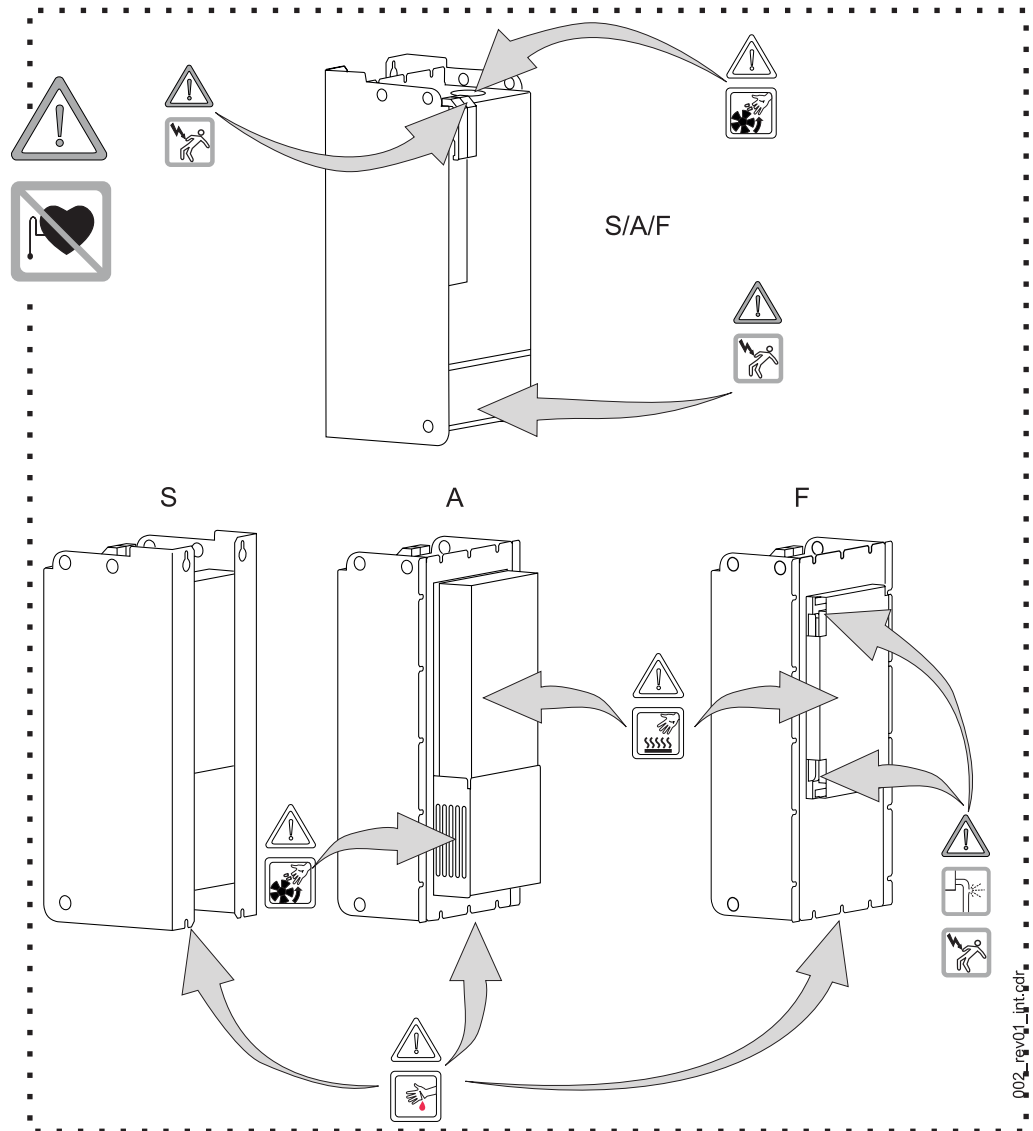


figure 2: hazardous areas

## 4.4 Characteristics of the unit - type key

### 4.4 Characteristics of the unit - type key

On the type shield (positioned on the inner side, see figure below) you will find the type key and the serial number of the appliance.

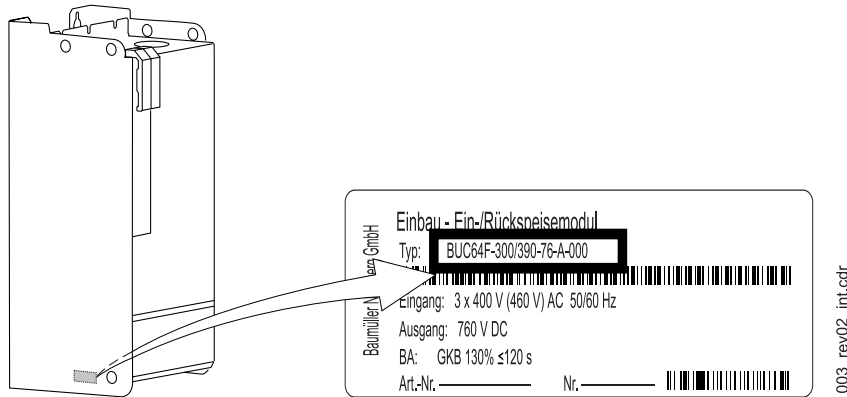


figure 3: type shield with type key

<u>BUC</u> 64XX - XXX/XXX - XX - X - XXX	Baumüller converter Feed/Feed back unit with analogue controller
BUC <u>6</u> 4XX - XXX/XXX - XX - X - XXX	Type
BUC6 <u>4</u> XX - XXX/XXX - XX - X - XXX	Size
BUC64 <u>X</u> XX - XXX/XXX - XX - X - XXX	Model
-: Standard	
BUC64XX <u>X</u> - XXX/XXX - XX - X - XXX	Cooling variant
S: air ventilation with intake and outlet inside the switching cabinet	
A: air ventilation with intake and outlet outside the switching cabinet	
F: water-cooled with water cooler outside the switching cabinet	
BUC64XX - <u>XXX</u> /XXX - XX - X - XXX	Output rated current in ampere at 40° C environmental- and coolant temperature and 4 kHz cycle frequency
BUC64XX - XXX/ <u>XXX</u> - XX - X - XXX	Output peak current in ampere at 40° C environmental- and coolant temperature and 4 kHz cycle frequency, $t \leq 120$ s
BUC64XX - XXX/XXX - <u>XX</u> - X - XXX	Rated DC link voltage x 10 [V]
BUC64XX - XXX/XXX - XX - <u>X</u> - XXX	Controller model
A: analog (3.9403)	
B: digital (V-cassette)	
BUC64XX - XXX/XXX - XX - X - <u>XXX</u>	Stage of development / model

On the type key you will find only a part of the technical specifications. An overview of all technical specifications you will find in [►Appendix D - Technical Specifications◄](#) from page 95.

4.5 Block switching diagrams

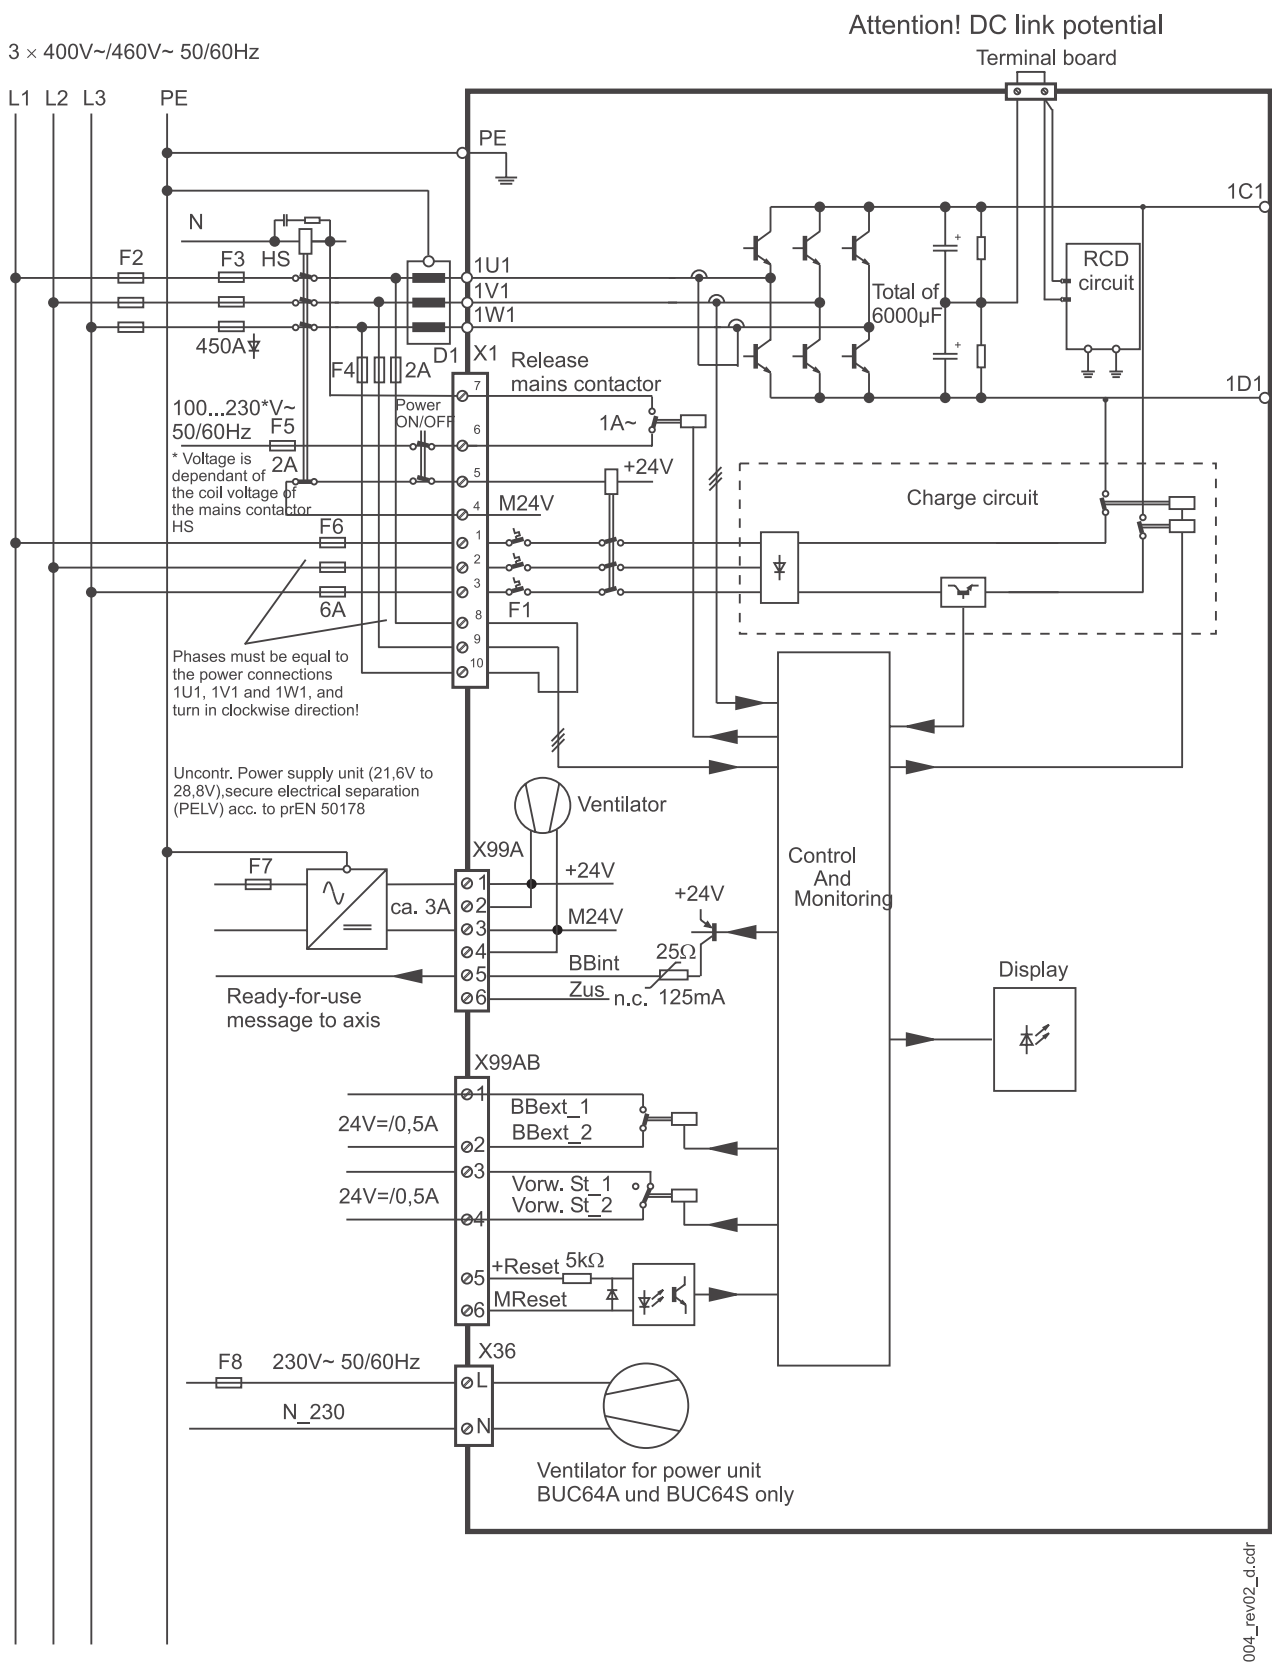


figure 4: Block switching diagram BUC64S/A/F

## 4.5 Block switching diagrams


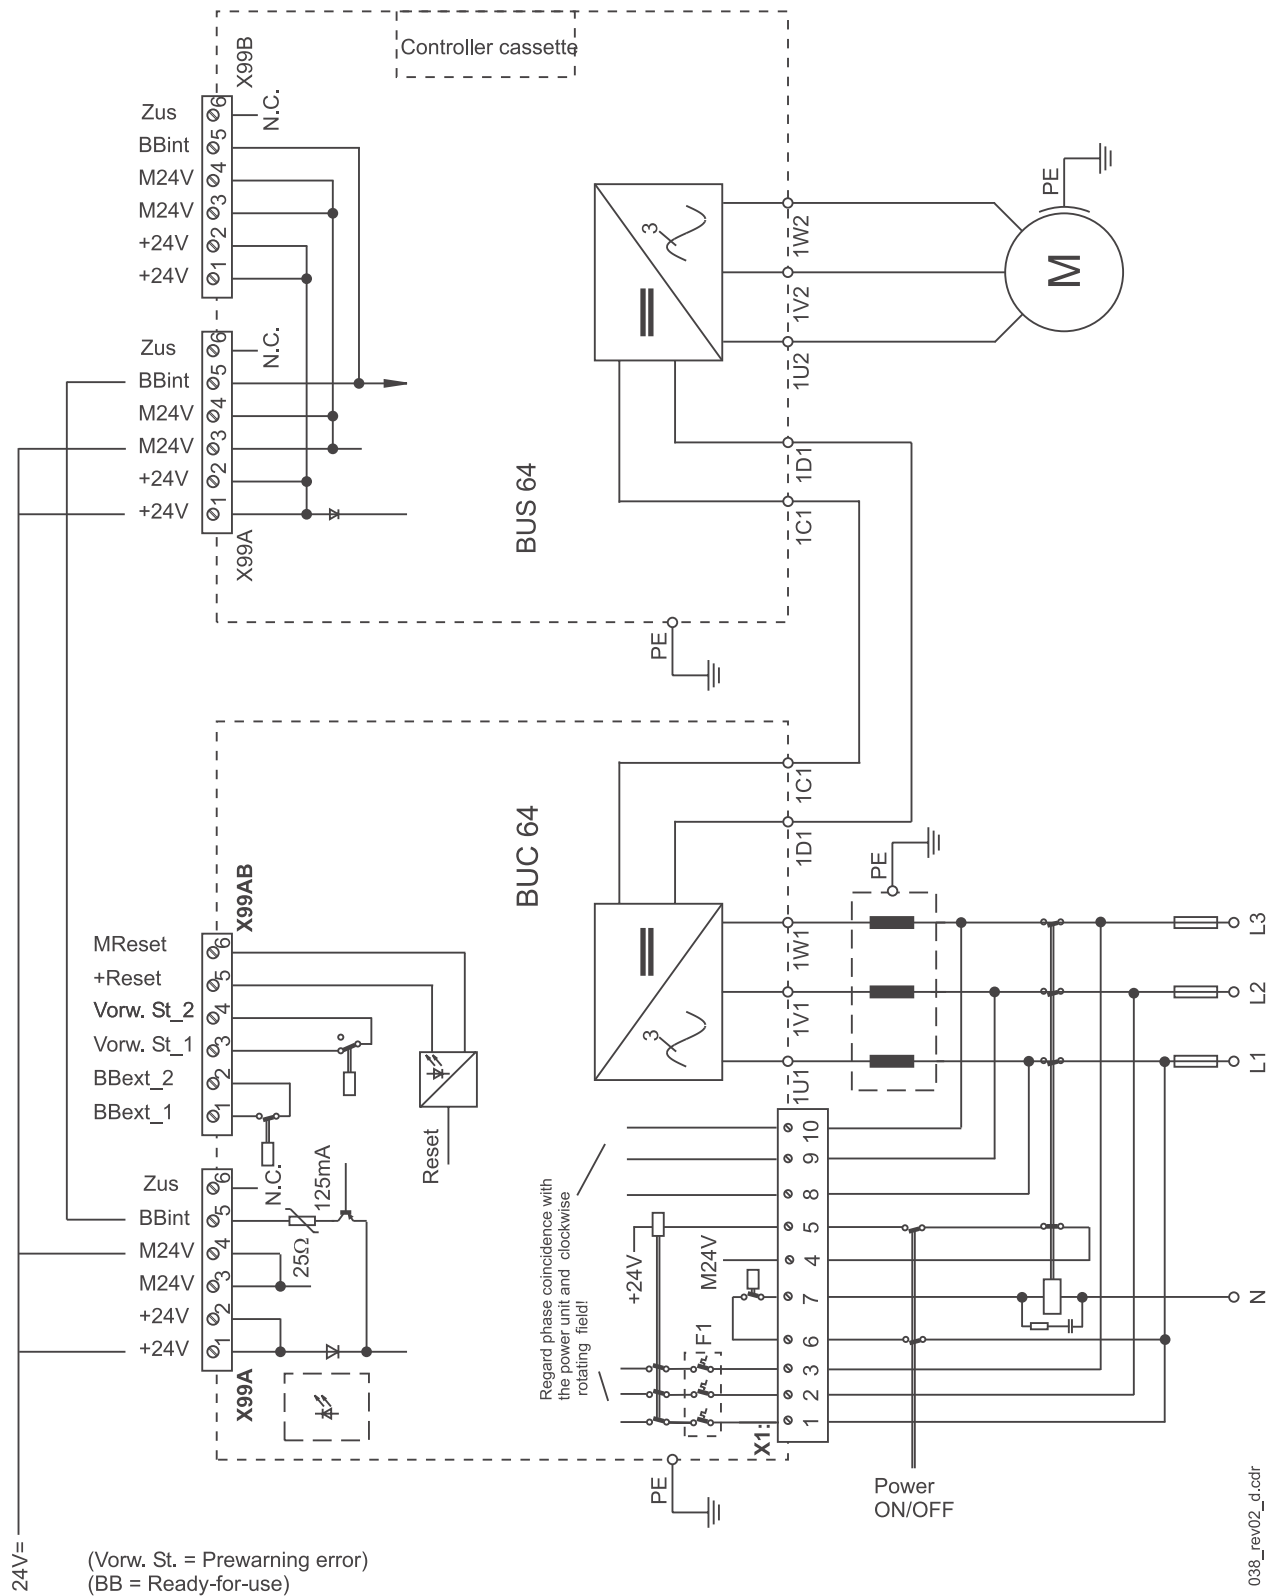


figure 5: Connections of BUC - BUS

### 4.6 Construction diagram

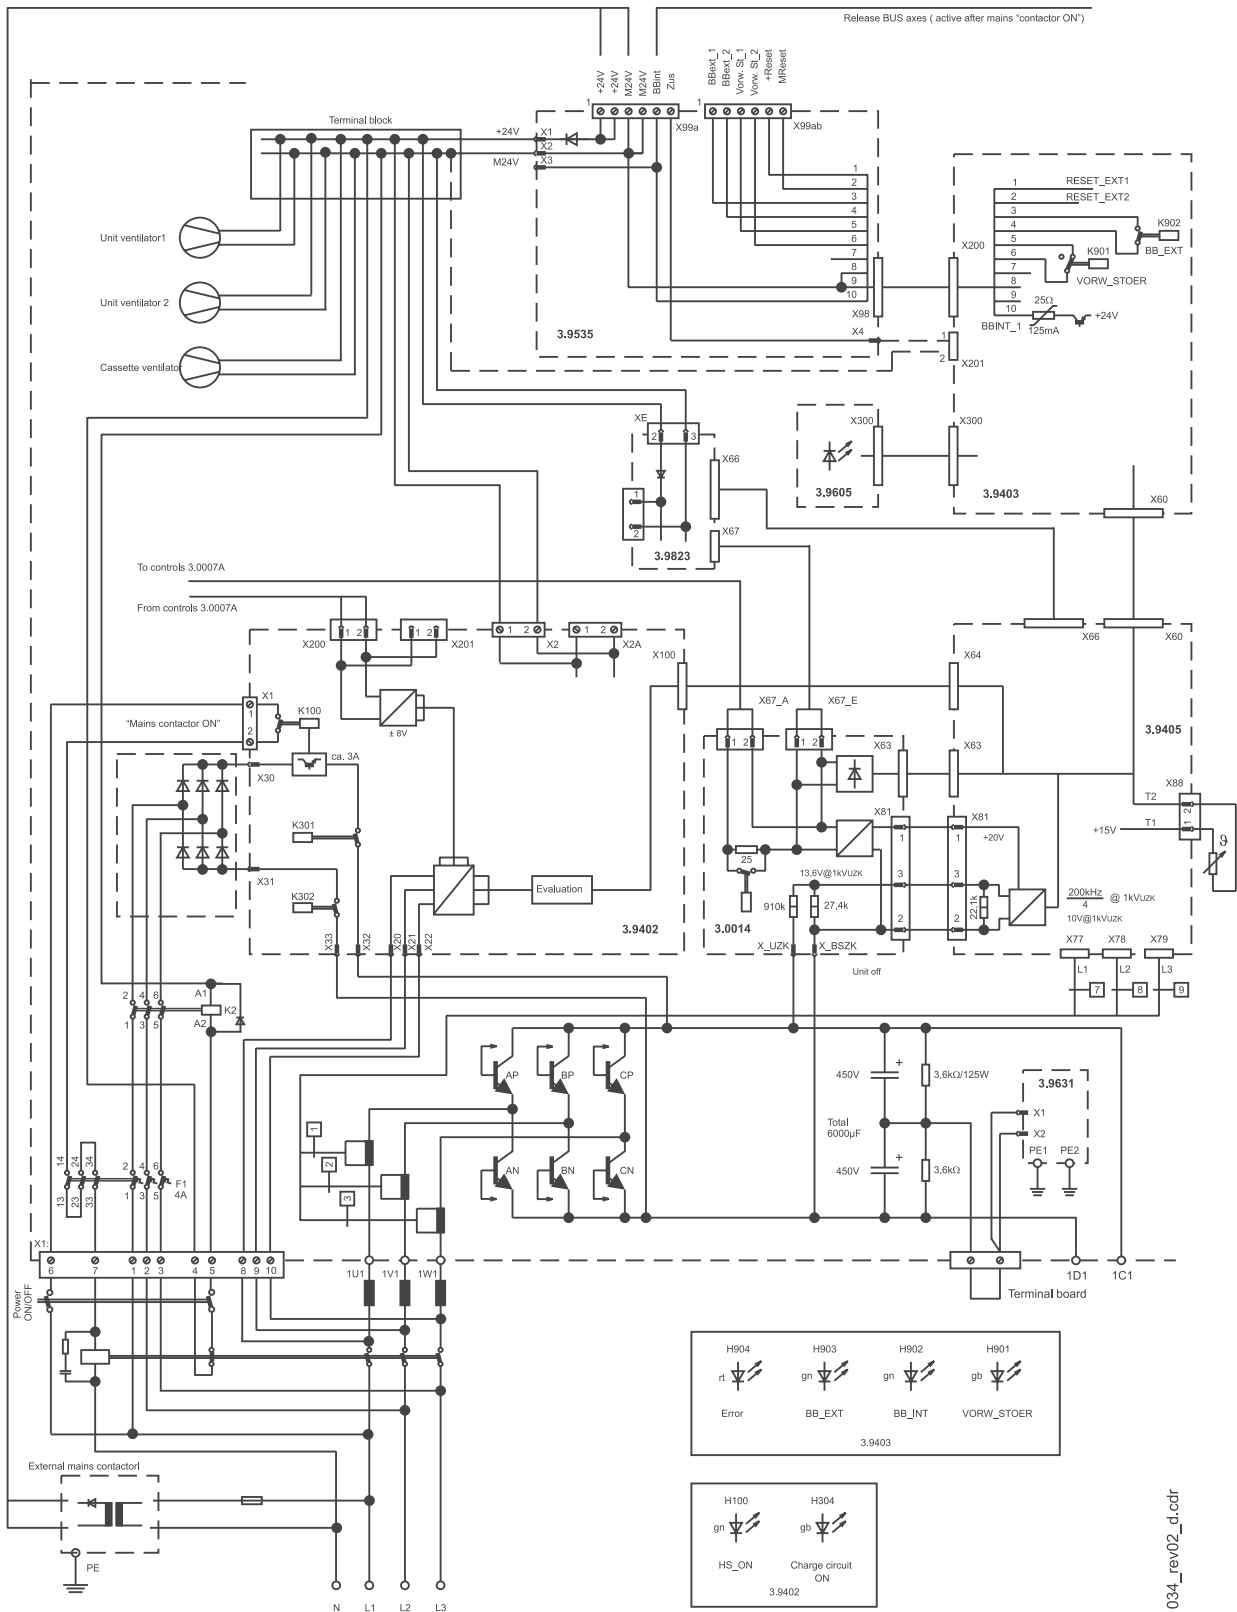

034\_rev02\_d.cdr

figure 6: Construction diagram BUC64-300A/390A part 1

## 4.6 Construction diagram

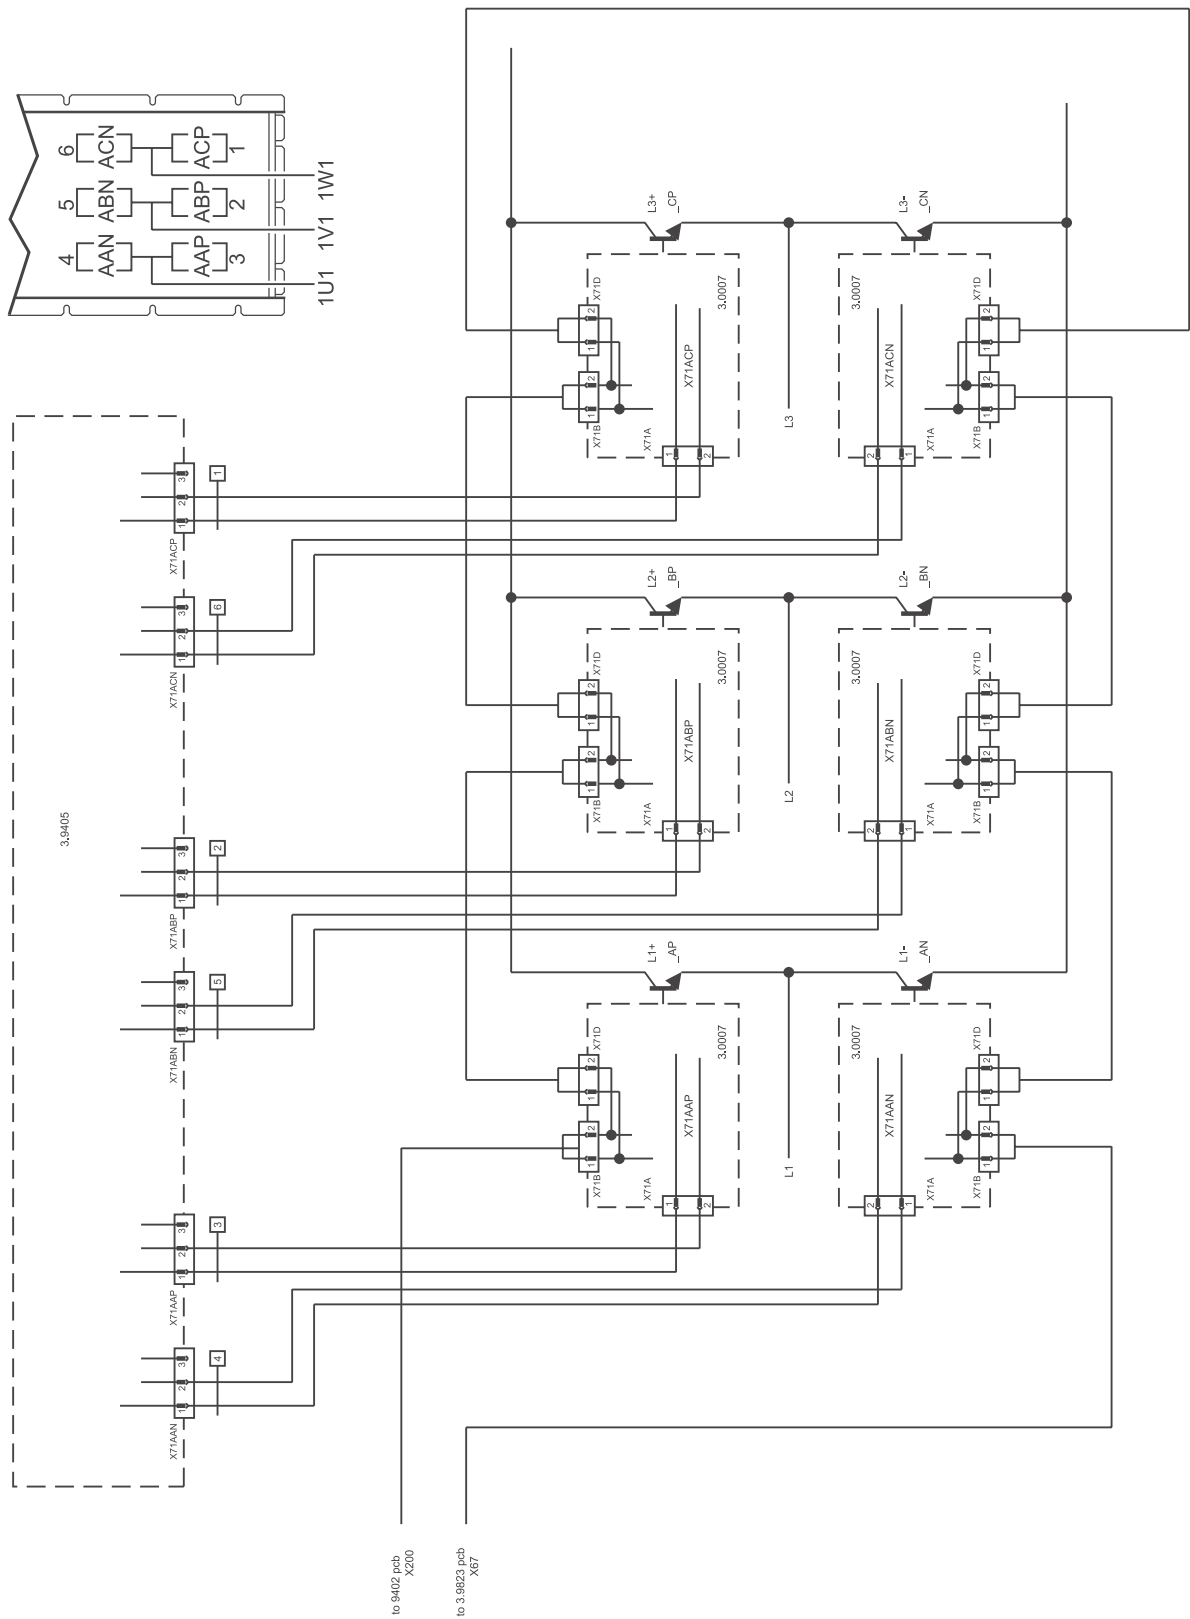


figure 7: Construction diagram BUC64-300A/390A part 2



4.7 Example for PowerOn/Off control

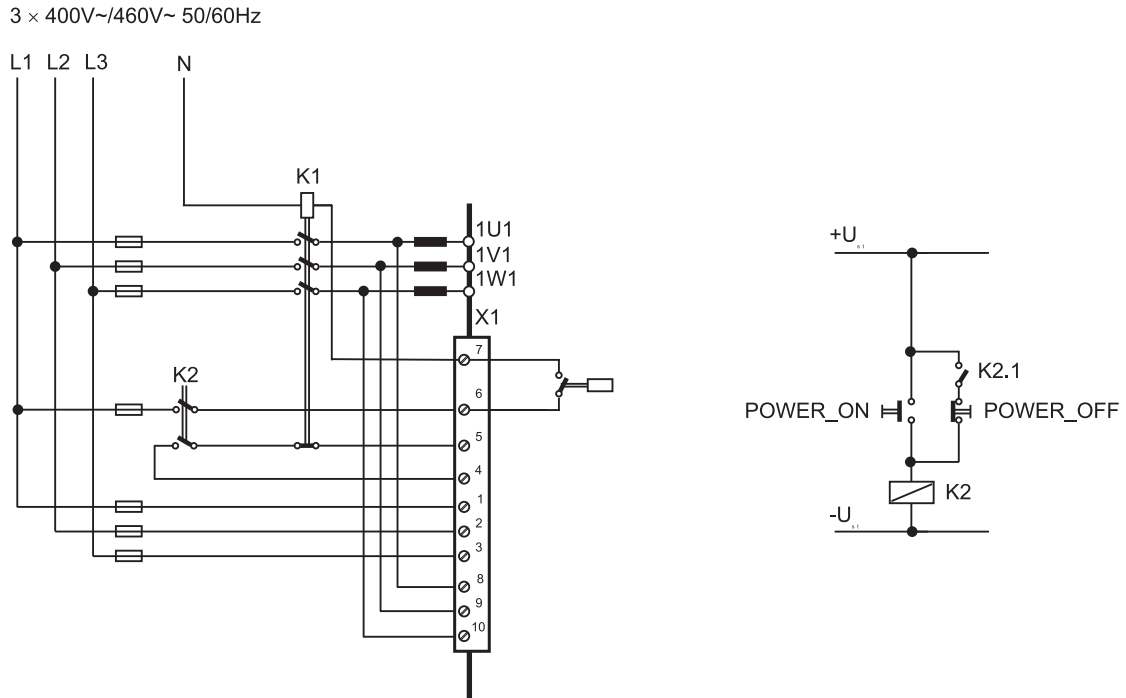


figure 8: Example for Power On/Off control

040\_rev02\_d.cdr



## MOUNTING

If you intend to mount the appliances within closed electrical work shops according to EN 50178/ VDE 0160, section 5.2.7, you will in addition have to take care of extra messages so you meet the requirements of EN 50178/VDE 0160, section 5.2.4 and EN 60204-1/ VDE 0113 part 1, section 6.2.2.

### 5.1 Hazardous areas during mounting

The following overview shows you the hazardous areas at the appliance which are important for mounting.



Use this overview for the mechanical mounting only. Hazards which are caused by electricity are not shown here. Hazards caused by electricity you will find under [▶6.2 Hazardous areas at installation◀](#) on page 47.

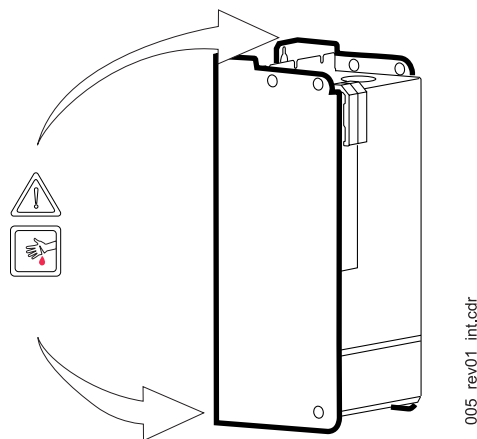


figure 9: Hazardous areas during mounting

### 5.2 Mounting steps

---

The mechanical mounting consists of the following steps:

- select the switching cabinet.
- produce the drill holes/threaded holes and the cut-out (variant A/F only).
- mount the unit.
- connect the coolant circulation (variant F only), test the tightness and perform a pressure test.

Further information concerning the single steps are given in the following sections.

#### 5.2.1 Select a switching cabinet

---

BUC64S/A/F units are build-in appliances with respect to EN 50178/VDE 0160 section 5.2.6. They are intended for mounting into ordinary switching cabinets, which meet the minimum requirements regarding the protection class stated in EN 50178/VDE 0160, section 5.2.4 (IP 2X, eventually also IP4X acc. to EN 60529/5.1).



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The hazard is: **mechanical influence**. The units weigh depending on the model approx. 60 to approx. 70 or kilograms.*

select a switching cabinet, which can carry this weight permanently.



#### NOTE

- If you mount a window variant (F/A), the back side may only have a maximum thickness of 6 mm.

5.2.1.1 Space requirements - dimensional drawings

Use the following dimensional drawings to determine the space requirements in the switching cabinet.



**CAUTION**


The following **may occur**, if you do not observe this caution information:

- property damage.

*The hazard is: overheating of the appliance.*

Take care of proper ventilation of the appliances exhaust air. Make sure that the coolant intake and outlet is not obstructed.

Observe the required coolant temperature and -amount (see [▷D.3 Required environmental conditions](#) on page 96). If necessary mount additional ventilators to the switching cabinet.

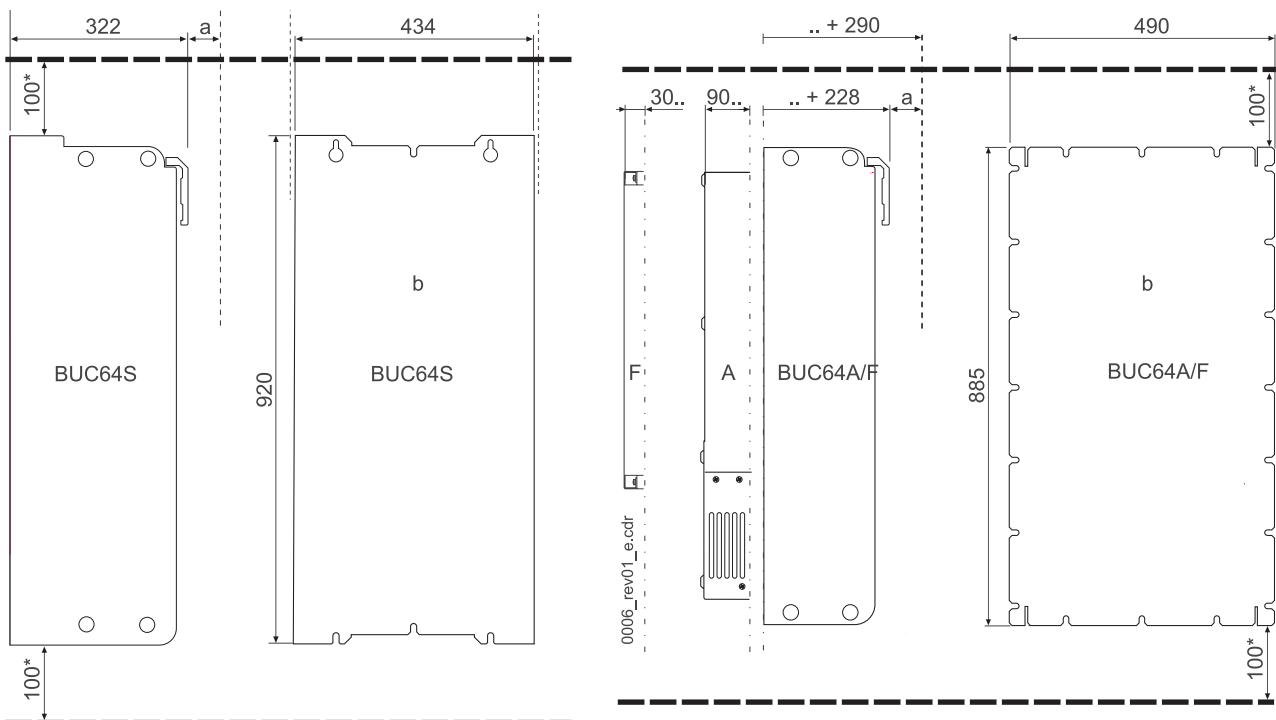


- a: free space for controller, connector and cable approx. 60 mm
- b: back side view
- \*: free space

figure 10: Dimensional drawing of BUC64S/A/F

## 5.3 Producing the drill holes/threaded holes and the cut-out

### 5.3 Producing the drill holes/threaded holes and the cut-out

- produce the drill holes/threaded holes (variant A/F only) according to the drilling figures below.

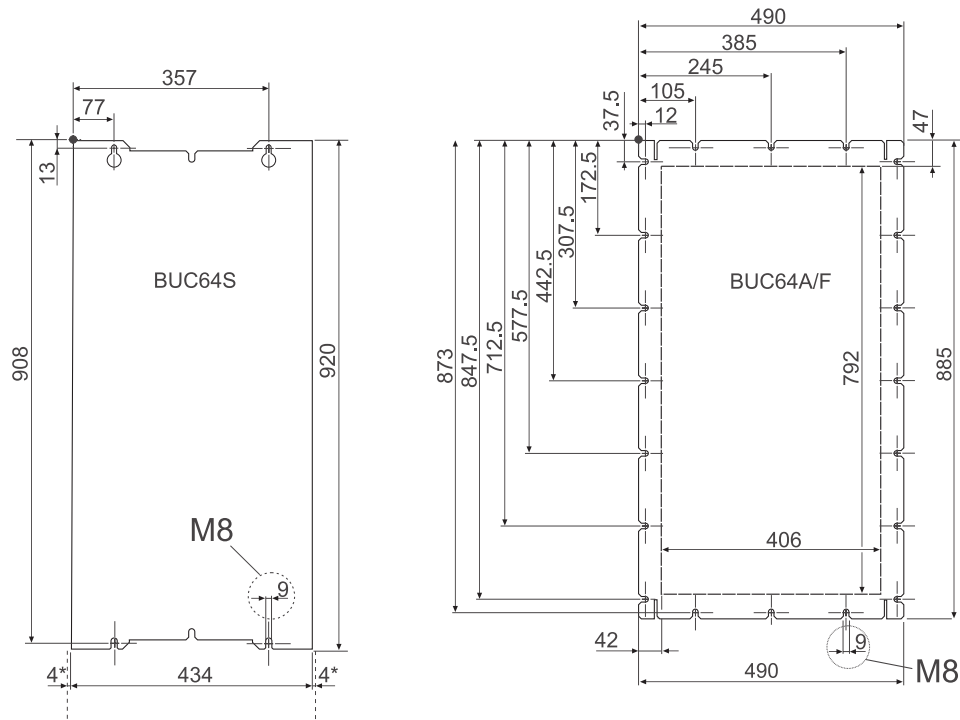

\* screw head

figure 11: Drilling figure of BUC64S/A/F

0009\_rev01\_e.cdr

## 5.4 Mounting the unit

---

- 1 screw the back side of the unit to the rear wall of the switching cabinet.
- 2 mount all screws in order to secure EMC of the units.

### 5.4.1 BUC64S mounting

---



#### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.



*The hazard is: **sharp edges.***

keep the unit's weight in mind - the appliance weighs approx. 70 kg.

lift the appliance only with suitable equipment and/or with the help of adequate qualified personnel.



carry safety gloves

## 5.4 Mounting the unit

screws (A)	4 x M8			
washers (B)	4 x (8.4 x 17)			
mounting distance (c)	c = 7 mm			

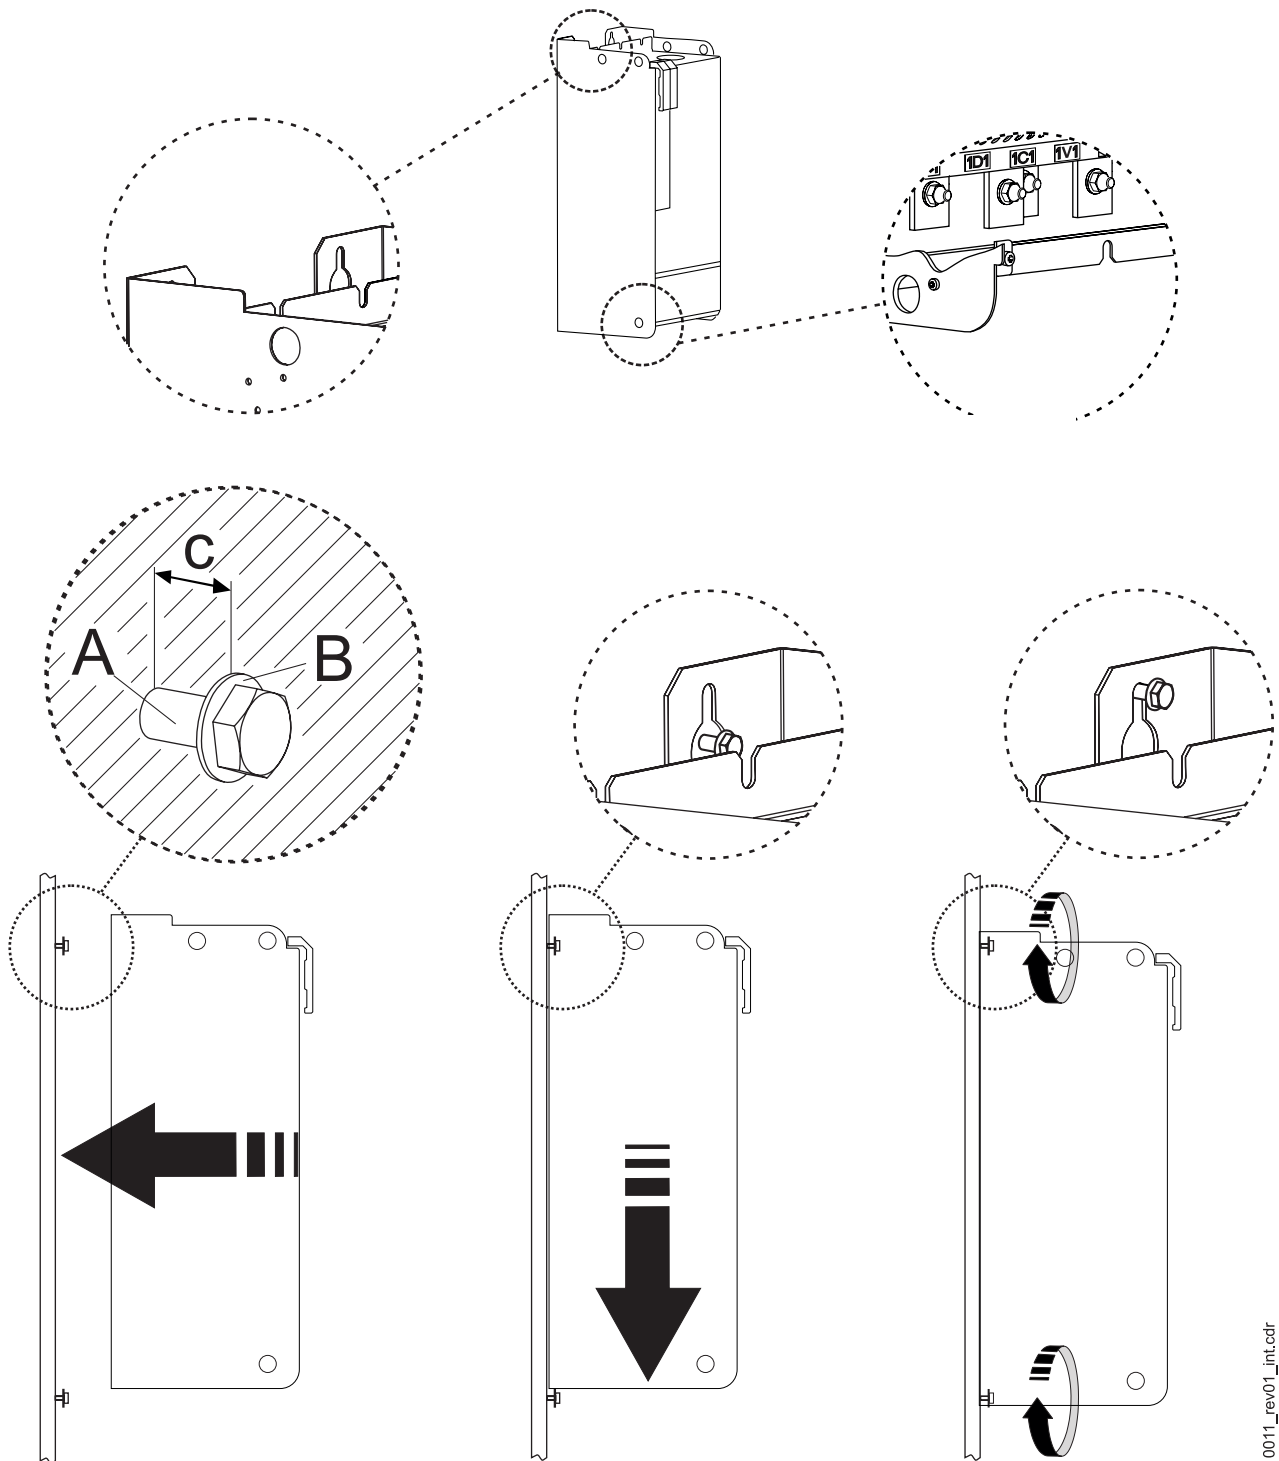


figure 12: Mounting instruction of BUC64S

0011\_rev01\_int.cdr



#### 5.4.2 Mounting BUC64 window variant A/F



#### CAUTION

The following **may occur**, if you do not observe this caution information:

- minor to medium personal injury.

*The hazard is: **sharp edges**.*



keep the unit's weight in mind - the appliance weighs approx. 60 kg resp. approx. 65 kg.

lift the appliance only with suitable equipment and/or with the help of adequate qualified personnel.



carry safety gloves



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The hazard is: **electrical conductive liquid in contact with electricity**. When a water-cooled appliance is ejecting coolant water, the water can invade through defective sealings into the switching cabinet and make contact with parts which carry dangerous voltages.*



Make sure not to damage the sealing at the back side of the unit. Only mount the unit if the sealing is not damaged.

## 5.4 Mounting the unit

screws (A)	16 x M8				
washers	16 x (8.4 x 17)				
sealing	see accessories				

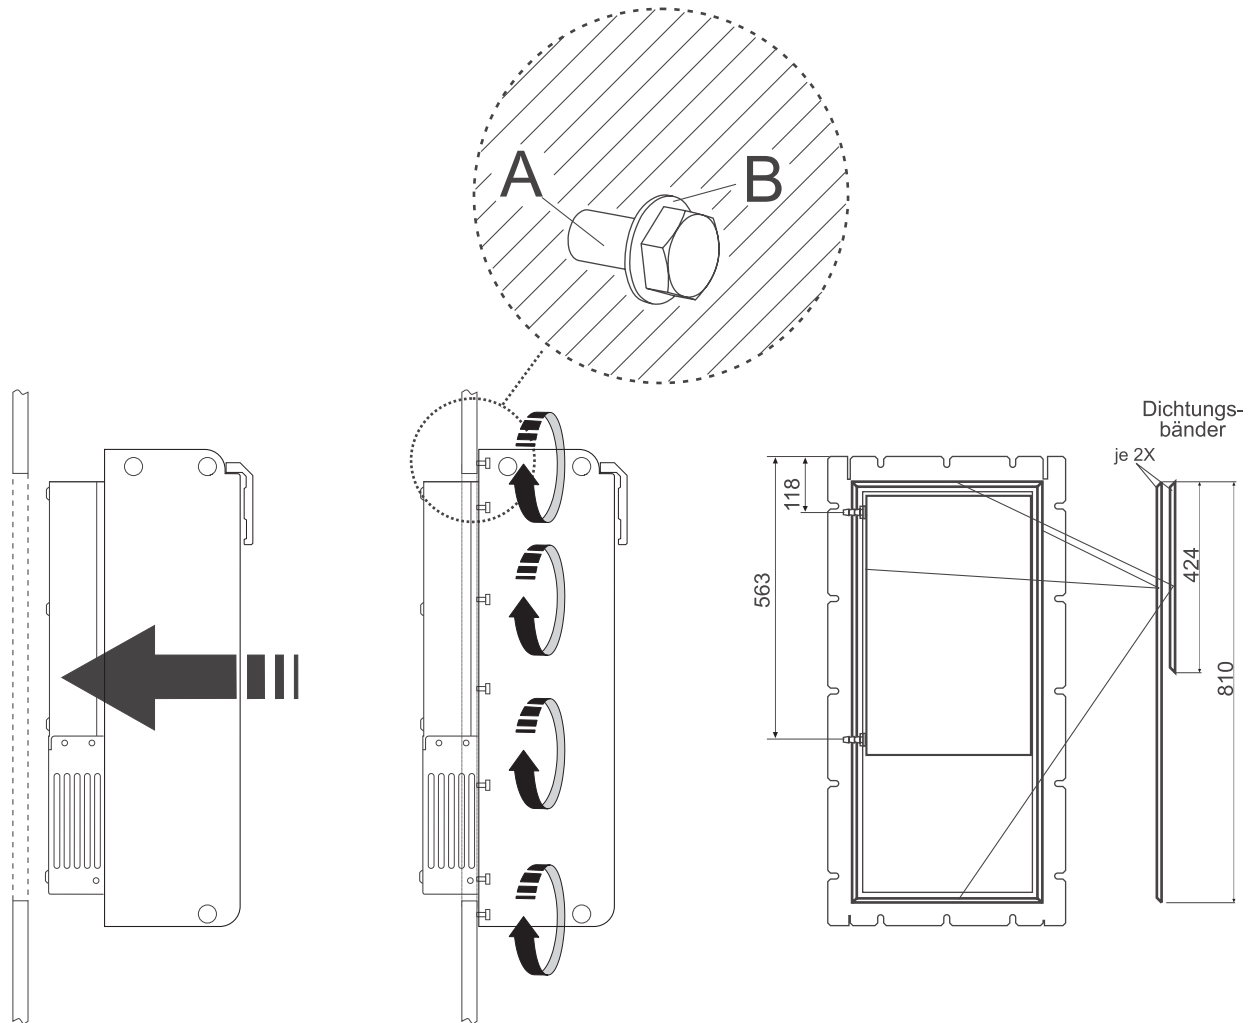


figure 13: Mounting instruction BUC64 window variant A/F

### 5.4.2.1 Coolant

The coolant must meet certain requirements. The requirements the coolant must have you will find in [►D.3 Required environmental conditions◄](#) on page 96.

#### WARNING



The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The hazard is: **electrical conductive liquid in contact with electricity**. The heatsink can corrode and become leaky if the wrong coolant is used. When e.g. the heatsink is leaky, the cooling water can emerge the coolant circulation, invade into the switching cabinet and make contact with parts which carry dangerous voltages.*



Do not mix anticorrosives!

Under all circumstances keep the mixture ratio and test the mixture ratio within the stated maintenance intervals (see [►Inspection interval◄](#) from page 73).

Observe the security information supplied by the anticorrosive manufacturer and the security data sheets according to EU-guideline 91/155/EEC or respective common national guidelines of the country where the appliance is in operation.

For disposal of the coolant observe the water endangerment classes (WGK) supplied by the manufacturer. Since May 17<sup>th</sup> 1999 there is no more class 0 within the VwVwS (German regulation about water endangering substances). Beginning from class 1 (weak endangering water, Germany) the water endangering rises with the number. In any case the disposal has to be carried out according to the regulations. The local waste water administration must be consulted. A disposal into the sewer - even thinned - is not allowed.

#### CAUTION



The following **may occur**, if you do not observe this caution information:

- property damage.

*The hazard is: **Damage of the coolant circulation**.*

Do not use coolant lubricants from manufacturing processes as coolant!

*Coolant circulations must be kept in a filled state using coolant-water mixtures in order to avoid corrosion at the transition between liquid and air.*

Make sure, that there are no air reservoirs within the coolant circulation.

*Remainders of coolant can act corrosive, lead to a lowering of the pH-value and act corrosive within the acid pH-value sector.*

When exchanging or switching over from one coolant to another observe that the coolant circulation must be thoroughly rinsed with water several times.

If coolant circulations that have been filled with a coolant-water mixture must be emptied and cannot be refilled within a few days, it is essential, that they are rinsed repeatedly with water and after that be emptied completely.

## 5.4 Mounting the unit

---

### 5.4.2.2 Connecting the coolant circulation

---

The BUC64F unit has a pre-mounted heatsink at its back. The topmost and the lowest threaded hole (G1/8") in the heatsink are destined for the intake and outlet of a coolant circulation system. For the connection to the customer side of the coolant circulation use connectors with an outside thread G1/8". Onto these connectors the customers hoses for intake and outlet can be fitted.

First mount the BUC64F within the switching cabinet. Then mount the heatsink connections which are accessible at the back side of the appliance.

Mounting the heatsink connections:

- 1 supply suitable connectors (material: brass, G1/8" outside thread)
- 2 clean the threaded holes and connectors
- 3 apply silicone sealant, e.g. Loctite 5331 onto a least one (clean!) thread winding.  
The silicone sealant prevents either corrosion between the different construction materials and improves also the security/tightness.
- 4 turn the connectors by hand into the threaded holes of the heatsink and tighten them with the maximum admissible torque.



#### CAUTION

The following **may occur**, if you do not observe this caution information:

- property damage.

*The hazard is: damage of the connectors thread.*

do not exceed the maximum torque (6 Nm) when you tighten the connectors.

- 5 connect the intake with one of the connectors.
- 6 connect the outlet with the other connector.



#### NOTE

You can choose any direction of flow.

- 7 check the tightness of the coolant circulation.
- 8 perform a leak test with the required pressure (6 bar).

# 6

## INSTALLATION

In this chapter we describe the electrical installation of the appliance. About the mechanical mounting you have learned in [►Mounting◄](#) on page 35.

The steps for installation are:

- 1 find out and check the required specifications of the power supply. Make sure the mains network meets the requirements.
- 2 find out what electrical wiring is required and supply the respective cables.
- 3 find out the characteristics of the connections and configure the cables respectively.
- 4 follow the EMC guidelines when routing the cables.

### 6.1 General hazard information

---

The BUC64S/A/F appliances are defined as working funds of protection class I in respect of HD366 S1 chapter 3.2, see also EN 50178/VDE 0160 sect. 5.2.9.

Working funds of class I are characterized by the fact, that the protection against dangerous body currents not only comes from the basic insulation. Furthermore they are equipped with additional safety precautions. This additional protection consists of the housing and other parts being supplied with a protective earth connection. So in case the basic insulation fails there is no risk of dangerous voltages. The insulation of the appliances is carried out across the total component at least in the basic insulation class according to EN 50178/VDE 0160, sect. 5.2.9.1. This applies to the insulation between current circuits and the environment.

The control connections of the appliance are secure isolated from the mains network. They are laid out for use of PELV-/SELV-circuits.

When determining the air- and creepage distances the following criteria have been considered:

- Soiling grade 2 acc. to EN 50178/VDE 0160, sect. 5.2.15.2, table 2, line 3: Normally only non-conducting pollutants are produced. When the units are out of service, brief conductivity can occur due to condensation.
- Overvoltage category III according to IEC 664-1, table 1 for the air clearances of mains circuits to their environment according to EN 50178/VDE 0160, sect. 5.2.16.1.

Series BUC64S/A/F power converters are conditional short-circuit-proof in the sense of EN 50178/VDE 0160, sect. 6.3.4.

During operation, the principles on which the power converter and the motor work lead to leakage currents to earth occurring that may be dissipated by using the specified protective earth connections.

Protection against direct contact with the units is achieved by installing them in commercially available switching cabinets. Their degree of protection must meet at least the minimum requirements of EN 50178/VDE 0160, section 5.2.4 and EN 60204-1, chapter 12.4.

Plastic covers on the equipment provide additional protection against accidental contact when commissioning or in case of casual use of control elements located close to the equipment.

Beneath the right plastic cover is a metal bridge, which is next to the control current terminals, which is laying over the two clamps on DC-link voltage (see [▶figure 2◀](#) on page 27 and [▶figure 2◀](#) on page 27) – **that is why you have to, before you open the plastic cover**

### pay attention to the discharging time of the DC-link!

For the power connection additional measures must be taken.  
(IEC 60536-2, chapter 5.1.1, German accident prevention directive “Electrical plants and working funds“ VBG4.)

Essential for personal protection are the safety measures and security regulations according to DIN/VDE.



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **Electricity**.*

*Missing protective conductor connections at the unit or at the motor can lead to personal damage.*

Protective conductor. Only operate the units at the earthed supply systems!

*Discharging time of voltage conducting parts is > 1 min.*

Before working at voltage conducting parts check with adequate test equipment that the parts do no longer conduct voltage. Touch parts only after you have assured that they are voltage free and after unit and motor have been secured against reactivation.

### 6.1.1 Voltage test

Every of these Baumüller Nürnberg GmbH units has been voltage-tested according to EN 50178/VDE 0160, section 9.4.5.



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death




The hazard is: **Electricity**.

Subsequent high voltage tests are to be carried out by Baumüller Nürnberg GmbH only.

If you want to perform a high voltage test of the complete switching cabinet equipment without the Baumüller-unit, you must first separate all cable connections from the Baumüller-unit.

### 6.2 Hazardous areas at installation

The following overview shows all areas at the unit, which can be dangerous at the electrical installation.

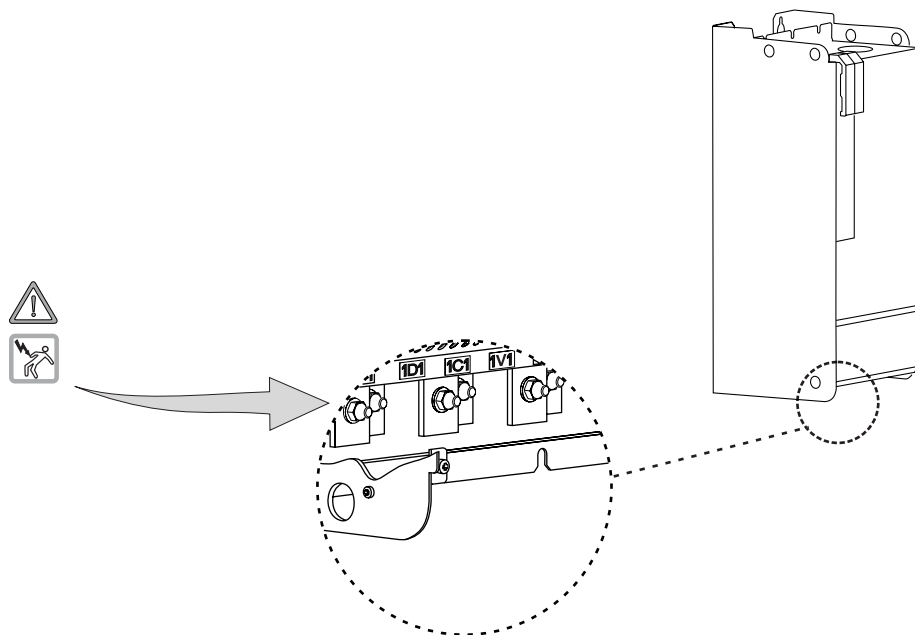

0014\_rev01\_int.cdr

figure 14: hazardous areas

### 6.3 Cable requirements

In [▶Appendix D - Technical Specifications◀](#) from page 95 you will find data concerning e.g. environmental requirements, electrical connection specifications and other specifications which you must regard when you select the cables.

Further information you will find in Appendix D under [▶Cable for control voltage supply / signals◀](#) on page 100 and [▶Cable for mains supply to appliance◀](#) on page 100.

- make sure all cables used meet the requirements.

### 6.4 Connections

In the following we give you detailed information about the connections. A summary is shown in the [▶Connection diagram◀](#) on page 60.

#### 6.4.1 Power terminals

The power connections are located at the bottom side of the unit (see [▶figure 15◀](#) on page 48).

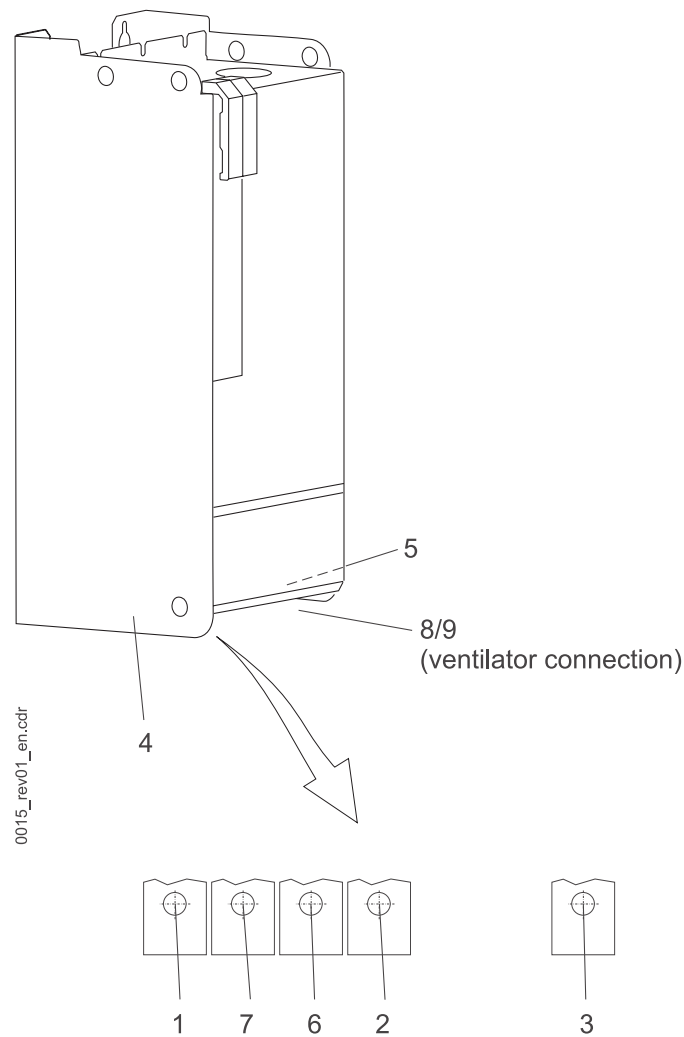


figure 15: Power terminals



terminal <sup>1)</sup>	pos. <sup>2)</sup>	description	$U_{\text{interval}}$	$I_{\text{interval}}$
1U1	1	L1 phase mains connection	400 - 460 V <sub>AC</sub> ±10 %	300 / 390 A <sub>AC</sub>
1V1	2	L2 phase mains connection		
1W1	3	L3 phase mains connection		
⊕	4	earth connection		
⊕	5	earth connection		
1C1	6	+ DC link connection	760 V <sub>DC</sub>	270 / 410 A <sub>DC</sub>
1D1	7	- DC link connection		
X36:L	8	ventilator connection <sup>3)</sup>	230 V +5 % -10 % 50 / 60 Hz	1 A <sub>AC</sub>
X36:N	9			

<sup>1)</sup> the cross-sectional area of connecting cable you choose is dependant of the application case according to the valid standards (for example DIN VDE 0100-430) ▶[Cable for mains supply to appliance](#)◀ from page 100.!

<sup>2)</sup> position see ▶[figure 15](#)◀ on page 48

<sup>3)</sup> only true for the coolant variants S and A. The two-pole terminal X36/N and L for the connection of the ventilator to 230 V are to be found down to the right of the device in the area of the power terminals, see ▶[figure 27](#)◀ on page 61.

#### 6.4.2 Control connections

##### WARNING



The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The hazard is: **Electricity.***

Do not overload the control connections. The permissible maximum v current of 10 A per terminal must not be exceeded.

Assure, that if there are higher current requirements that it is multiple-separately supplied.

Make sure, that all applied control voltages meet the PELV or SELV requirements.

### 6.4.2.1 Control terminal X99A

Use the supplied screw type connectors to connect terminal X99A. If you need more screw type connectors please contact Baumüller Nürnberg GmbH or the manufacturer of the connectors directly (see [►B.2 Connectors◄](#) on page 88).

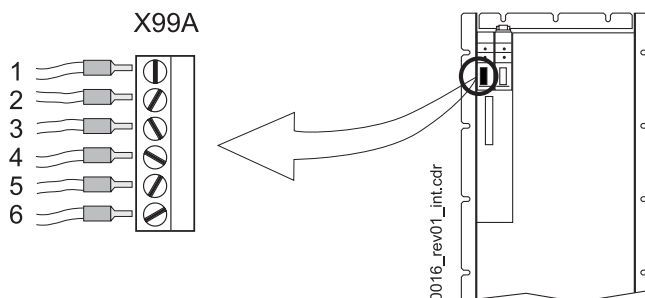


figure 16: Control terminal X99A

terminal <sup>1)</sup>	pos. <sup>2)</sup>	description	$U_{\text{interval}}$	$I_{\text{interval}}$
+24 V	1	+ 24 V (PELV) <sup>3)</sup> terminal 1 and 2 are bridged internally	24 V <sub>DC</sub> -10% / +20%	2.5 A <sub>DC</sub>
+24 V	2			
M 24 V	3	ground 24 V (PELV) terminal 3 and 4 are bridged internally		
M 24 V	4			
BB <sub>int.</sub>	5	message "ready-for-use internal" <sup>4)</sup> 0 V: feed unit is not ready-for-use 24 V: feed unit is ready-for-use	0 / 24 V <sub>DC</sub>	max. 30 mA
ZUS.	6	reserved	-	-

<sup>1)</sup> Permissible connection cross-section of the conductors, see [►Cable for control voltage supply / signals◄](#) on page 100.  
When connecting consider EMC instructions: see [►EMC requirements on cable routing \(EMC information\)◄](#) on page 54.

<sup>2)</sup> Position, see [►figure 16◄](#) on page 50.

<sup>3)</sup>




#### NOTE

Each terminal is to be loaded with a maximum load of 10 A. If you require more current to be conducted, feed by use of 2 terminals. This way a total of 20 A is possible.

<sup>4)</sup> The BUC64S/A/F transmits with this output the "ready-for-use" to the connected appliance(s).

6.4.2.2 Control terminal X99AB

Use the supplied screw type connectors to connect terminal X99A. If you need more screw type connectors please contact Baumüller Nürnberg GmbH or the manufacturer of the connectors directly (see >B.2 Connectors< on page 88)

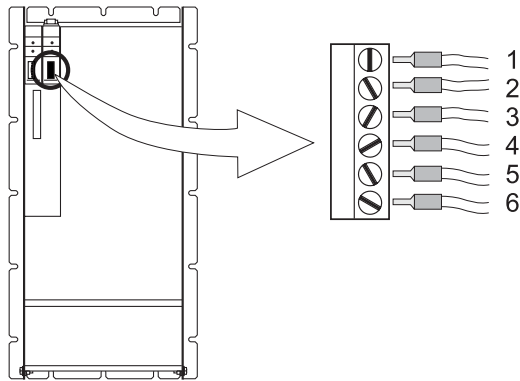

0036\_rev01\_int.cdr

figure 17: Control terminal X99AB



terminal <sup>1)</sup>	pos. <sup>2)</sup>	description	U <sub>interval</sub>	I <sub>interval</sub>
} BB <sub>(ext)</sub>	1	Message <b>"ready-for-use external"</b> Open contact: infeed unit not ready-for-use (BB = ready-for-use)	24 V <sub>DC</sub>	up to 0.5 A <sub>DC</sub>
	2	Closed contact: infeed unit not ready-for-use		
} Vorw. Stör.	3	Message <b>"Warning"</b> Closed contact: infeed unit - no warning (Vorw. Stör.= prewarning error)	24 V <sub>DC</sub>	appr. 5 mA <sub>DC</sub>
	4	Open contact: infeed unit - warning		
+Reset	5	potential free optocoupler input for reset of all error messages. 	24 V <sub>DC</sub>	appr. 5 mA <sub>DC</sub>
M Reset	6	Reference potential for +Reset input (M = GND)		-

figure 18: potential free optocoupler input

1) Position, see >figure 17< on page 51.

2) Conductor cross-section.

### 6.4.2.3 X1 connection of the charging circuit

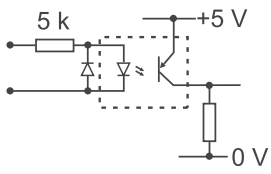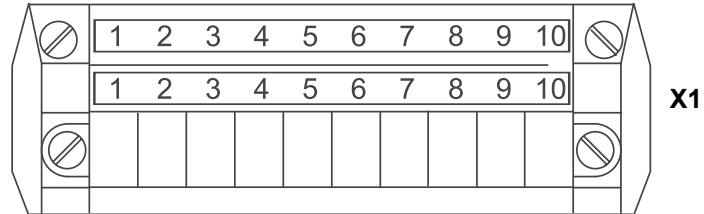

terminal no.	description
	<b>Feed supply charge circuit</b>
1	L1 phase of mains voltage, 4 A <sub>AC</sub>
2	L2 phase of mains voltage, 4 A <sub>AC</sub>
3	L3 phase of mains voltage, 4 A <sub>AC</sub>
	<b>Charge contactor off</b>
4	Auxiliary contact of mains contactor (NC contact), max. 0.5 A <sub>DC</sub>
5	Auxiliary contact of mains contactor (NC contact)
	<b>Mains contactor on</b>
6	Release contact of mains contactor
7	to coil terminal of mains contactor, max. 230V <sub>AC</sub> /1A <sub>AC</sub>
	<b>Mains synchronization</b>
8	Phase L1 mains voltage after mains contactor, max. 5 mA
9	Phase L2 mains voltage after mains contactor, max. 5 mA
10	Phase L3 mains voltage after mains contactor, max. 5 mA

6.4.2.4 LED display

The LED display shown is situated on the front side of the appliance (see >figure 19< on page 53).

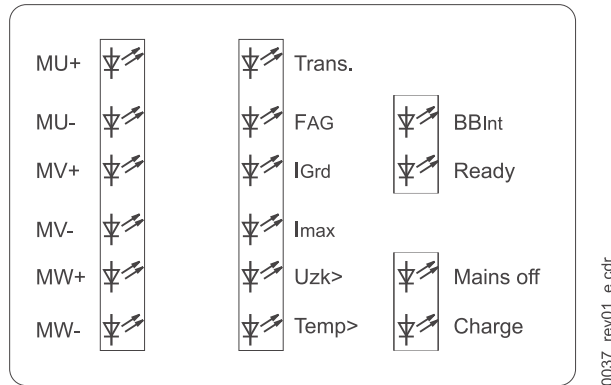


figure 19: LED display

MU+	Transistor overcurrent Phase L1 up
MU-	Transistor overcurrent Phase L1 down
MV+	Transistor overcurrent Phase L2 up
MV-	Transistor overcurrent Phase L2 down
MW+	Transistor overcurrent Phase L3 up
MW-	Transistor overcurrent Phase L3 down
PLL	PLL net synchronous
FAG	Error 100 kHz/24 V auxiliary supply
IGrd	Earth current
Imax	Overcurrent mains input (I-Phase > 650 A)
Uzk>	DC link voltage > 840 V or error Uzk-measurement
Temp>	Heatsink temperature for 10sec > 95 °C
BBInt	Ready-for-use BUC (for connected BUS units)
	Accumulative message of
	Temp>
	Ready
	Mains off
	End DC link charge (Charge)
	PLL net synchronous
	and
	Mains connection at x1:8/9/10 o. k. (without LED display)
	BUC controller released (without LED display)
Ready	Ready-for-use BUC power unit
	Accumulative message of
	FAG
	IGrd
	Imax
	Uzk>

## 6.5 EMC requirements on cable routing (EMC information)

---

Mains off   Network failure message (phase failure monitoring)  
Charge   DC link precharge active

### 6.5 EMC requirements on cable routing (EMC information)

---

In these devices semiconductors are inserted, which, by means of quick switching minimize the power loss and therewith make a small size possible. These semiconductors generate due to the quick switching electromagnetic waves. That is why you have to consider certain preconditions when you operate with converters, in order to avoid electromagnetic influences as a result of switching procedures.

Disturbances can occur in all sections of the drive system and are caused by:

- capacitive fault currents caused by high rates of voltage rise when semiconductors switch.
- high currents and high rates of current rise in the motor cables. The disturbance energy bound in magnetic fields reaches frequencies of between a few Hertz and about 30 MHz. Due to the high rates of current rise, additional electromagnetic fields occur with frequencies of up to approximately 600 MHz.
- high clock rates and fast logic circuits (electromagnetic field/16 MHz up to 1 GHz).

#### 6.5.1 German EMC law (EMVG)

---

This appliance complies with § 6 sect. 9 of EMVG dated 18.09.1998:

*„Devices, systems and components in the sense of section 3, that are exclusively manufactured or stocked as vendor parts or spare parts for further processing by industrial companies or craftsmen or by other specialists in the field of electromagnetic compatibility do not need to comply with the protective requirements of § 4 sect. 1 no. 1 to 3 and 5.“*

EMC largely depends on how the individual components and units are assembled and interconnected within the switching cabinet. The information given on the next pages is intended to enable you to configure your plant according to the newest EMC knowledge. This way you can keep the respective legal regulations.

#### 6.5.2 Measures to ensure EMC

---

To ensure EMC you should strictly keep to the following configuring information.

##### 6.5.2.1 Cabling

---

- screen **all** cables connected, so the cables are kept free from perturbing radiation (see [►Screening◄](#) from page 58). You can mount unscreened control cables, if the switching cabinet has a sufficiently high screen damping (see limit value for radio disturbance emission according to EMVG for your plant) and if the EMC compatibility inside the switching cabinet is guaranteed. (This you can assume, when you have observed all configuration instructions given in this documentation).

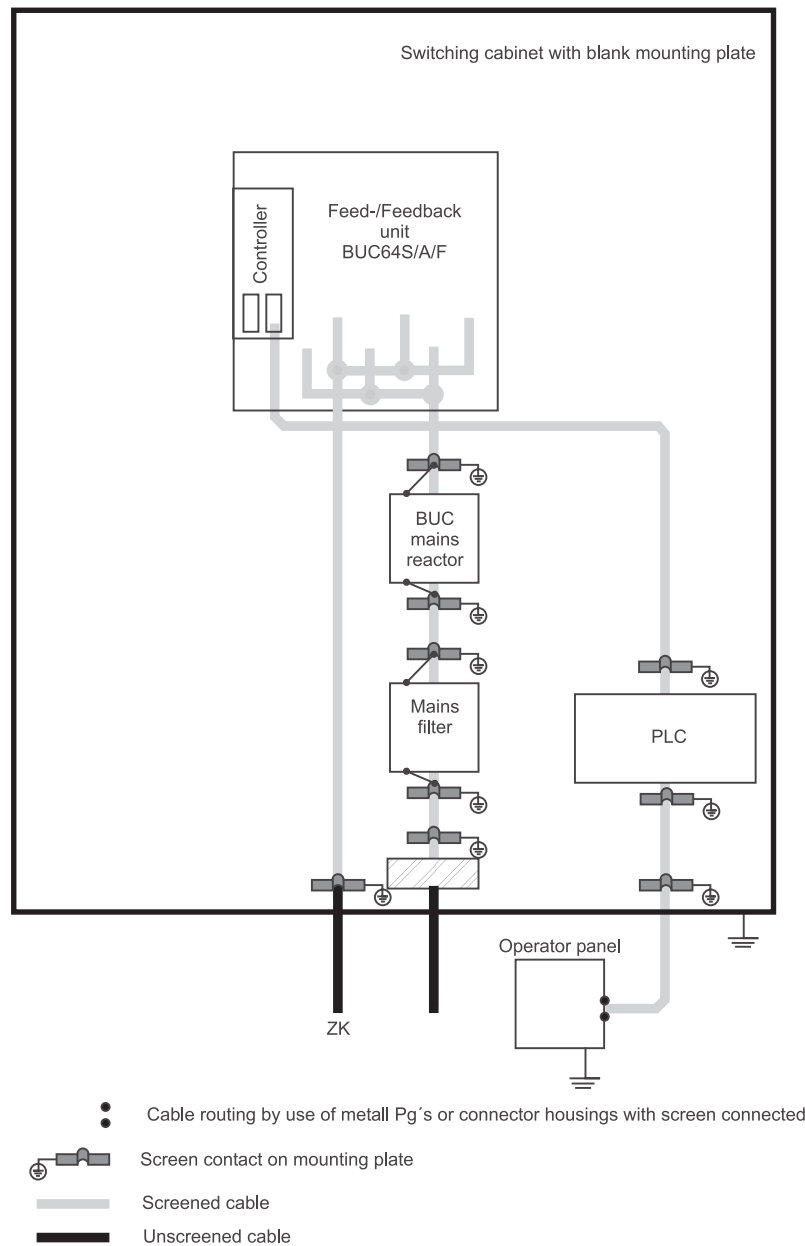


figure 20: Cabling suggestion for BUC64S/A/F

- The cable (DC link connection) between BUC and the connected BUS units must consist of one single piece.  
Do not interrupt the cable by e.g. terminals, circuit breakers, fuses etc.
- The cable (DC link connection) between BUC and the connected BUS units should be kept as short as possible.

- ▶ You achieve the lowest possible effective antenna height by routing the cable directly alongside of a metallic surfaces

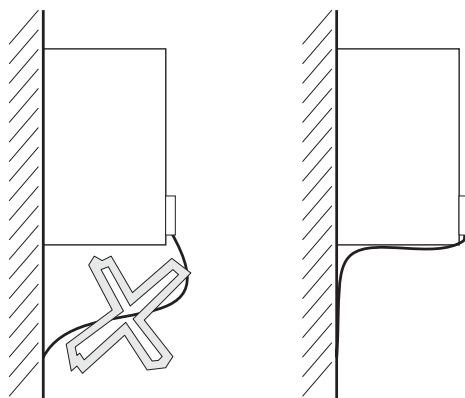


figure 21: reducing effective antenna height

- ▶ You should route all lines as close as possible to the conductors of the ground system to reduce the effective loop area for magnetic coupling.

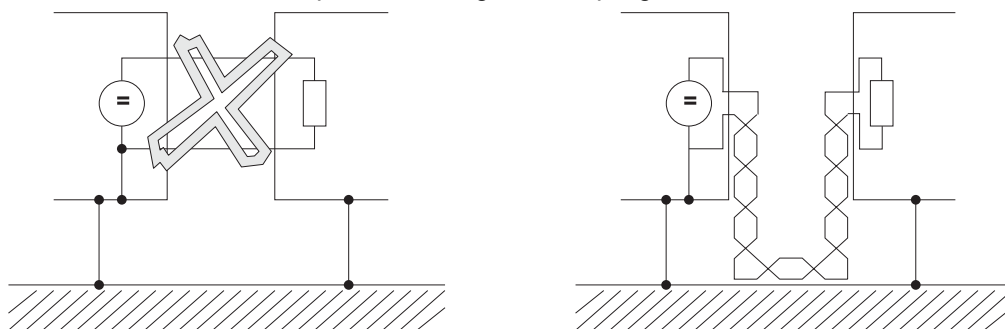


figure 22: reducing loop areas

- ▶ At parallel laying of signal/control lines and power cables a minimum clearance of 20 cm has to be complied with between the conductors.
- ▶ Lines of different EMC categories should only cross at an angle of 90°.
- ▶ For symmetrical signal transmission form twisted pair cables and twist those against all other twisted pairs (e.g. for differential amplifier inputs used for speed setpoint value).
- ▶ The appliance-to-ground plate earth connection should be as short as possible (< 30 cm). Use large cross-sections (> 10 mm<sup>2</sup>).
- ▶ Keep a distance of at least 20 cm between converter and its cabling and
  - disturbance sources as circuit breakers, transformers, line reactors and
  - disturbance sensitive modules like  $\mu$ Ps, bus systems etc.
- ▶ Avoid reserve loops on overlong cables.
- ▶ The grounding on reserve conductors in cables is mandatory (additional screening is achieved, you avoid capacitive coupled hazardous contact voltages coupled in).
- ▶ For each unit use a separate mains filter. If you must suppress all drives together - do not interrupt the screening between the converter and the motor.



### 6.5.2.2 Grounding

To meet EMC requirements, the classical star grounding is no longer sufficient to reduce the disturbance of high frequencies caused by converter operation. Better results can be achieved by a reference surface which must be linked to the unit's ground (e.g. bare metal mounting plate and housing parts).

- ▶ to avoid earth loops, position all ground conductors and screens as close as possible to ground.
- ▶ If it is possible to ground the controller reference potential of unit, form the connection with as large a cross-section as possible and short (< 30 cm) cable.
- ▶ remove insulating layers such as paint, adhesives etc. from the ground connections.
- ▶ if necessary, use serrated lock washers (DIN 6798) or similar measures to ensure a permanent, conductive contact.
- ▶ to prevent corrosion on ground connections, use suitable metal combinations (in the sense of the electrochemical series of metals).
- ▶ keep conductive electrolytes away from the connection by the use of protective coating (e.g. with grease).
- ▶ connect screens at both ends over a large contact surface and with good conductivity. Only this way you can suppress the effects of magnetic or high frequency disturbance.
- ▶ if earth loops occur (e.g. double insulation of the setpoint conductor screen), apply the receiver side galvanically and the sender side capacitively.
- ▶ when routing external cable screens through panels separating different EMC areas, ensure contact of the panels to the cable screens.

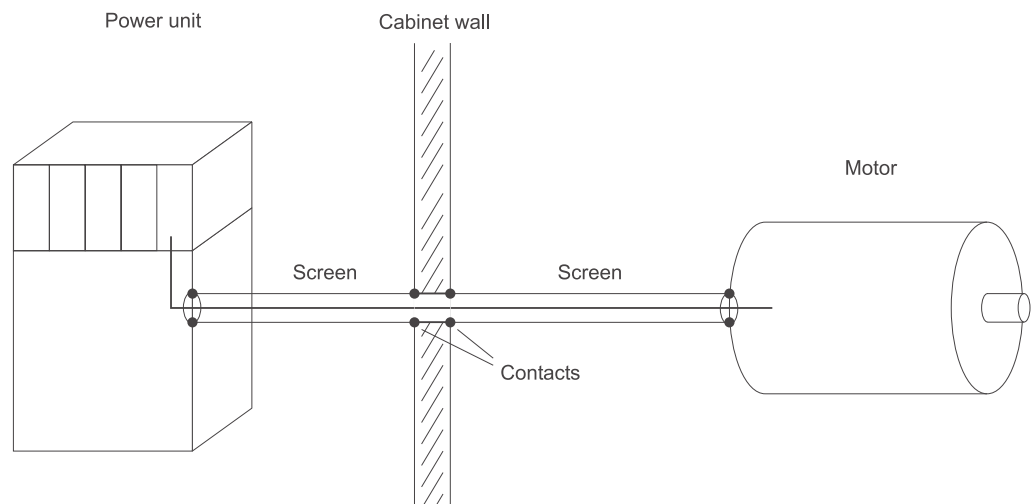


figure 23: contacting cable screens when routing through cabinet panels

Cables which are passed through the panels of screening housings without special measures (e.g. filtering), may impair the screening effect of these housings.

- ▶ form a good conductive connection of the cable screens where the cable enters the housing.

- ▶ take care that the distance of the last screen contact point to the exit of the cabinet must be as short as possible.

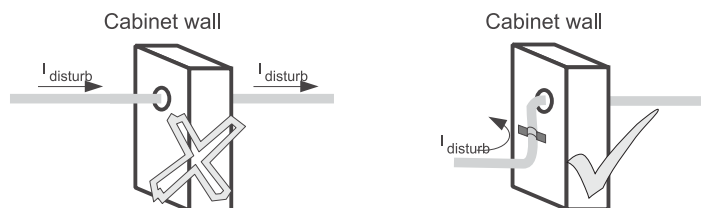


figure 24: cable screening when exiting a cabinet

### 6.5.2.3 Screening

The screening is effective against magnetic fields if the screen is connected to ground on both ends.

With electrical fields, the screen is effective when it is connected to ground at only one end.

- ▶ However, in case of (both electrical or magnetic) fields with high frequencies (depending on the length of the line), you must always connect the screen at both ends

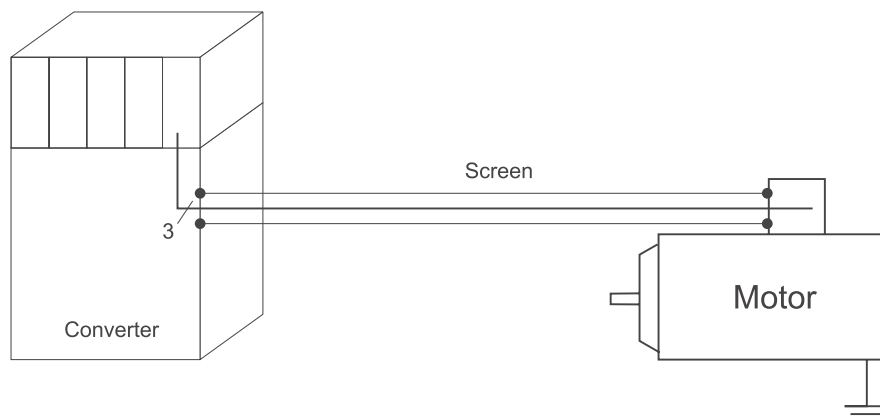


figure 25: screen contact on both sides of a line

With the applying of the shield on both sides on earth you attain that the shielding of the system (motor/converter) is not interrupted.

Grounding of conductor screens on both sides does not entirely rule out the influence of earth circuits (potential differences on the ground system). Those are very rare, if you carry out the measures described in the previous sections entitled ([▶Cabling◀](#) from page 54) and ([▶Grounding◀](#) from page 57).

You can also form a capacitive RF connection of a screen to ground. This prevents low-frequency interference due to earth circuits.

- ▶ screened cables that are routed through different EMC areas must not be interrupted at terminals, since screen damping would otherwise be reduced considerably.
- ▶ if possible, run the cables without interruption to the next module.
- ▶ carry out the screen connection low-impedant and use a wide surface.

Cable tails that are only 3 cm long (1 cm of wire = 10 nH) reduce the screening effect in the megahertz range by up to 30 dB!

**NOTE**

The screen braiding must have a coverage of at least 85%.

The following cables have a particularly high interference potential:

- motor cable
- cable to external ballast resistors
- cable between mains filter and converter

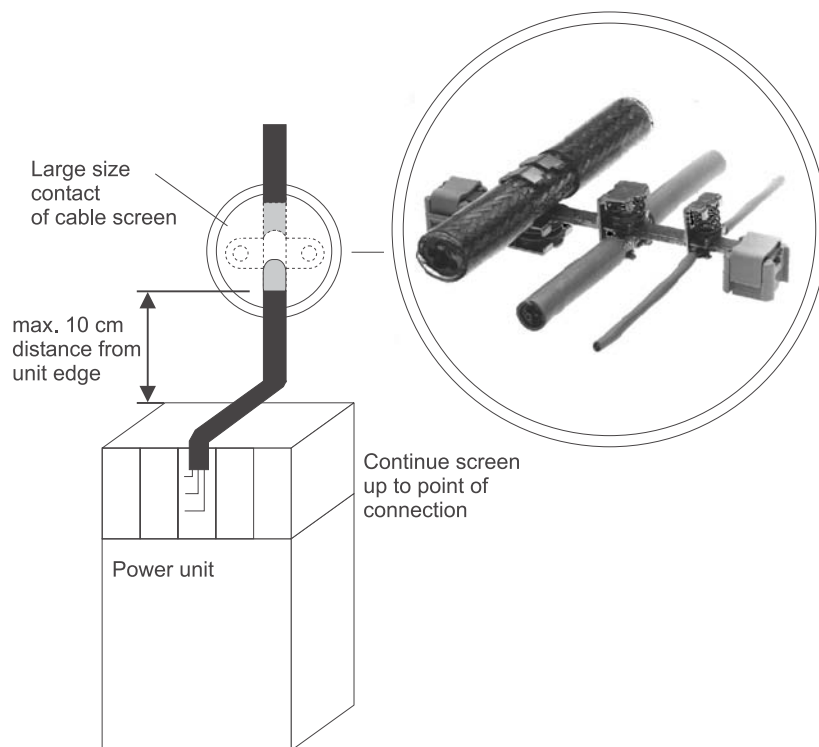


figure 26: Proposal for the screen connection

Screen terminals available from Baumüller Nürnberg GmbH you will find in ([▶B.1 EMC accessories](#)◀ on page 87).

#### 6.5.2.4 Discharge currents

Due to the principle of operation, parasitic capacities in the power unit, motor cable and motor windings can add to discharge currents of 100 mA or higher.

This means that converters may be incompatible with earth leakage circuit-breakers!

- In this context observe the safety information given in the EN 50178/VDE 0160 sect. 5.2.11.2. standard.

### 6.6 Connection diagram

---

- run the cables according to EMC rules and connect them as shown in the connection diagram.



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death




The hazard is: **Electricity**.

Take care that the permissible connected load (see [▶Electrical specifications◀](#) from page 98) is not exceeded!

Reinstall the coverages that came with the appliance and tighten the screws of the coverages after you have finished the power cable connection.

---

Further information you will find in [▶Block switching diagrams◀](#) from page 29 and [▶Connection diagram◀](#) from page 60.

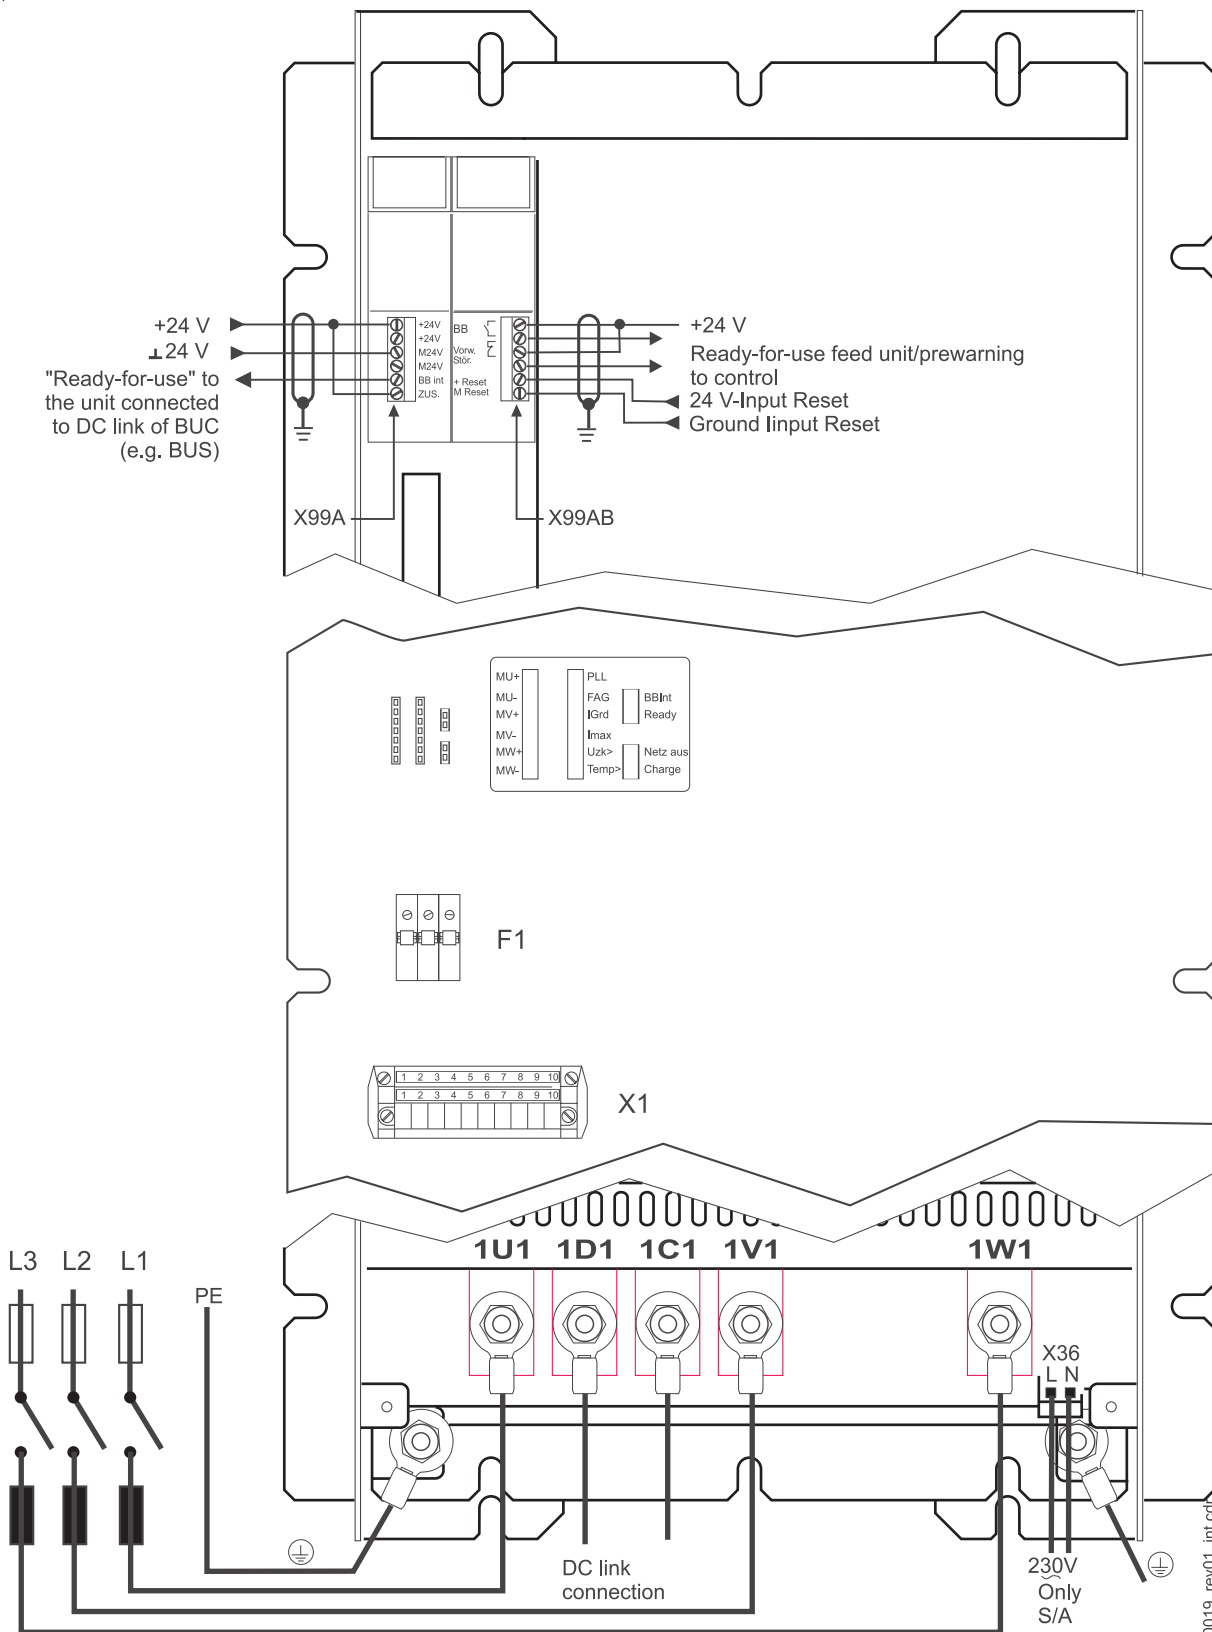

0019\_rev01\_int.cdx

figure 27: BUC64S/A/F connection diagram

## 6.6 Connection diagram

---

Information about the respective connections you will find in section [▶Power terminals◀](#) from page 48.

Below we have listed more connection information.

+ 24 V ± 24V	24 V power supply with secure electrical isolation (PELV) according to IEC 61131-2; table 7 for supplying of the electronic section.
-----------------	--

# 7

## COMMISSIONING

Commissioning consists of the following steps:

- 1 check the mounting
- 2 check the installation
- 3 check the safety devices
- 4 switch on unit

Further information regarding these steps we give to you in the subsequent sections.

### 7.1 Requirements the executing personnel must meet

---



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death



*The hazard is: **Electricity**. When this electrical appliance is operated, certain parts are under dangerous voltages.*

Make sure, that only qualified personnel, which is familiar with the safety information and the mounting-, operation- and servicing instructions is working at this appliance.

---

Qualified personnel are persons who have been authorized by the plant manager to carry out the activities required, who are able to recognize possible dangers and to avoid them. They must have the skills, experience, instruction and knowledge of the operational conditions and the respective standards, regulations and rules to detect and avoid accidents.

The qualifications required for operating this application are for example:

- education or instruction, respectively permission to commission, ground and label electrical circuits and appliances according to the safety technique standards.
- education or instruction in maintenance and handling of adequate safety equipment according to the safety technique standards.

### 7.2 Checking the mounting

- ▶ make sure the unit is correctly fastened to the switching cabinet.
- ▶ make sure the sealing is not damaged (applies to window-mounted variants A/F only).
- ▶ make sure the coolant circulation is not leaking (variant F only).

### 7.3 Checking the installation



#### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*The hazard is: **Electricity**. Voltage conducting parts must be protected against direct touch.*

This can be achieved by insulation, design, position, layout or firmly mounted devices.

*The power terminals of the power des power module are conducting dangerous potentials!*

*For personal protection it is essential that the security precautions and security regulations according to DIN/VDE are regarded. If protective conductor connections at the appliance or the motor are missing you risk personal damage because the surfaces might be carrying dangerous voltages.*

The protective conductor connection is to be carried out according to DIN EN 60204/VDE 0113 part 1; section 8.2.2 regarding also EN 50178/VDE 0160, sections 5.3.2.1 and 8.3.4.4.

*Under operation there always appear discharge currents in the power module and the motor. They are conducted by using the orderly protective conductor and can lead to premature response of a series fault current circuit breaker.*

*In case of a body contact or a earth fault a direct current component can appear within the fault current, which can complicate or keep a supervising fault current circuit breaker from responding.*

*Even after the action of the feed units main contactor the parts of the power module are carrying dangerous voltages.*

- ▶ check, if the cables leading to the power terminals are routed and connected properly.
- ▶ check, if the cables leading to the signal (control-) terminals are routed and connected properly.



## 7.4 Checking the safety devices



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*This appliance is conducting dangerous voltages and holds dangerous rotating machines (ventilators at variants A/S).*

Switching cabinets must be equipped with emergency stop devices who are able to cut off all voltages which can lead to hazards. Not included are appliances that would generate new hazards after being cut off. The release for the emergency stop device must be placed in a way that it is fast to reach in case of an emergency. If you carry out operations that hold higher hazard levels the presence of an additional person is required.

- ▶ before activating the drive check thoroughly the function of all supervisory safety devices in order to avoid personal hazard.
- ▶ before commissioning make sure, that all covers for the voltage conducting parts (power terminals) are in place and the ventilators have been covered with gratings.
- ▶ make sure, that the touch protection has been carried out according §4 section 4 VBG 4 (German regulation).

## 7.5 Appliance start-up



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personal injury
- death

*During the first commissioning there is no guarantee that the driven machine elements are not activated by fault or mistake. Therefore be extra careful during the first commissioning.*

*Extra care is to be taken when directly or indirectly touching the shaft. This is allowed only when the shaft is in stand still position and the power module is cut off from voltage. During operation free accessible machine parts such as shafts or ventilators must be covered.*

*When an error occurs the drive will be switched off current; the motor will run down without breaking. This circumstance must be regarded especially in transmission or hauling applications.*

- ▶ make sure there are no persons present in the dangerous area of the machine driven.
- ▶ make sure the plant can be switched off immediately by emergency stop devices.
- ▶ switch on the appliance by the correct step-by-step start-up (see [▶7.5.1 Step-by-step starting](#) on page 66) and be aware of faulty or uncontrolled conditions of the plant.

### 7.5.1 Step-by-step starting

---

Take care, that the F1 automatic circuit breaker within the BUC64 is switched on. If the F1 automatic circuit breaker is not switched on, the DC link cannot be precharged.

- 1 Switch on the MCB
- 2 Switch in electronic supply (+24 V at X99A: 1/3)
- 3 The internal charging contactor starts up as soon as the terminals X1:4/5 – power on/off – are connected
- 4 The charging procedure begins with the starting-up of the mains supply of the installation

After charging time has been completed (up to 10 s), over the contact X1:6/7 at the device the message “release line contactor” is generated (NO contact), the LED “charge” goes off and the internal charging contactor releases

The relay contact X99AB: “ready-for-use external” (BBext) is closed. At the same time over the transistor output X99A: 5 “ready-for-use internal” (Bbint) the ready-for-use message is routed on to the connected device(s)/ (axis/axes). The DC-link is loaded to nominal voltage and is controlled by the BUC-controller constantly.

Settings on the supply-/recovery unit are not necessary.

# OPERATION

In this chapter we do not describe the operation but the monitoring and display elements on the device, which are important for the operation.

## 8.1 Safety instructions

---



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personnel injury
- death

Immediately report changes, which could affect the security.

In order to demount safety devices, to commission or to repair, set the machine/installation in exact accordance with the instructions out of operation.

Mount the safety devices again and assure their function directly after completion of commissioning or repairing it.

---

When having environmental temperatures between 40 °C and 55 °C the peak output must be reduced by 3 %/°C (peak output DC-link). This can only be reached by accordant parametrization of the connected axes.

The connected axes must be adjusted in such a way, that the peak output (peak output DC-link) doesn't take longer than 120 s. See description of the BUS axes.

## 8.2 Switch-on

---

Switch on the device in the prescribed correct order (see [▶Step-by-step starting◀](#) on page 66).

## 8.3 Monitoring functions and „ready-for-use“

### 8.3 Monitoring functions and „ready-for-use“

Monitoring functions monitor the condition of the device. The monitoring functions affect the superordinate message „ready-for-use“ (see [▶Figure 28◀](#) on page 68).

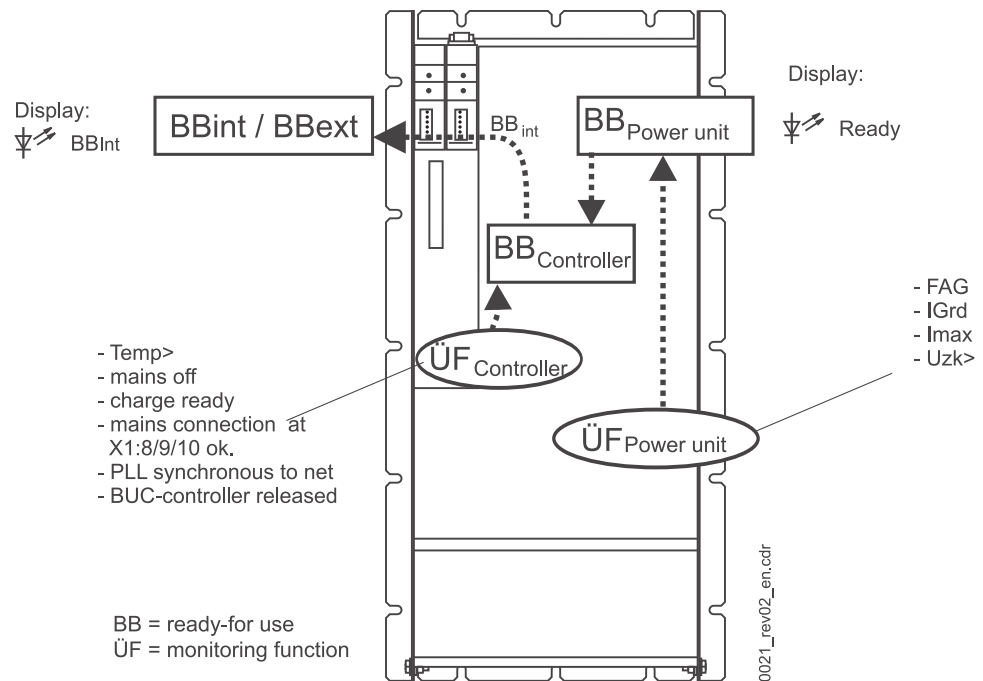


Figure 28: Monitoring functions and „ready-for-use“

### 8.4 Monitoring functions



#### NOTE

The monitoring functions are only then active, if the +24V-supply voltage at X99A is present.

If the BUC is connected to the attached BUS axes over the signal lines (see [▶Figure 27◀](#) on page 61), the monitoring functions of the supply unit influence the axes over the line „BB<sub>int</sub>“ (ready-for-use).

## 8.5 Ready-for-use



### WARNING

The following **may occur**, if you do not observe this warning information:

- serious personnel injury
- death

The message „ready-for-use“ is dependant of the monitoring functions (see [▶Figure 28◀](#) on page 68). If a monitoring function generates a message, which deletes the message „ready-for-use“, the drives are connected zero-torque.

Assure that therewith no dangerous operation conditions (for example reverse running of the motor and so on) are able to occur.



### NOTE

After creating the +24V-supply voltage and the mains voltage, the device is ready-for-use after approximately 5 seconds.

### "Ready-for-use supply device"

If the supply device determines no error, the monitoring function of the supply device generates the message "ready-for-use".

This message is routed over the terminal X99A-5 at the BUC to the terminal X99B-5 at the BUC.



### NOTE

The message "BBint" is dependent of the two other ready-for-use-messages. Not until the messages "ready-for-use power unit" and "ready-for-use controller" are available, the message "BBint" is displayed (see [▶Figure 28◀](#) on page 68).

If one of the three messages "ready-for-use" is deleted by a monitoring function, the DC-link of the BUC releases no energy anymore, that means the connected power modules (BUS) do not release any power anymore after discharging of their DC-links.

### Relay

The relay „BBext“ closes the status signal contact X99AB-1/2, if the message „ready-for-use power unit“ is existent and if **no** monitoring has acted. Concurrent the ready-for-use internal is generated. This signal is evaluated by the devices which are connected to X99A-5 (BBint).

### LED

The LED „ready“ displays the message „ready-for-use power unit“.

The LED „BBint“ displays the message „ready-for-use“ (BBint/BBext).

(LED-displays see [▶Figure 19◀](#) on page 53).

### Ready-for-use messages (BB) of BUC 64

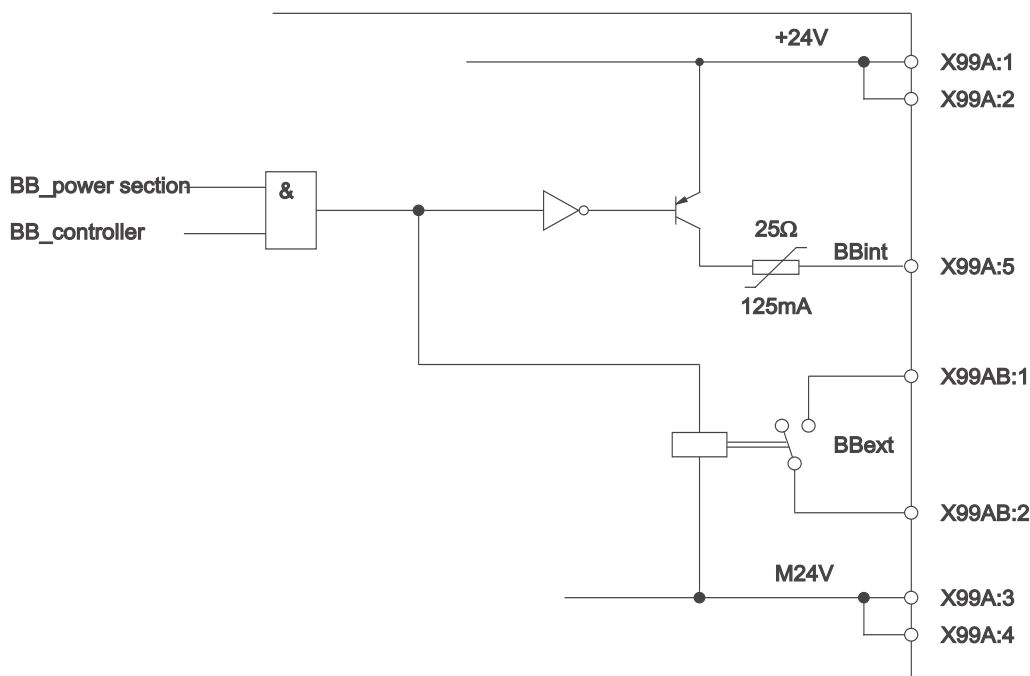


Figure 29: Ready-for-use-messages BUC 64

#### Overcurrent

In case of an exceeding of the phase current of 30 % of the amplitude of the permissible peak current an impulse inhibit takes place and the BUC64S/A/F generates this message. This message is stored. The messages "ready-for-use power unit" and "ready-for-use supply device" are deleted.

#### LED

The LED „lmax“ displays the message „overcurrent“ (see [▶Figure 19◀](#) on page 53).



#### NOTE

The limiting of the permissible peak current must follow by means of the adjusting of the controller of the connected BUS axes.

#### Earth current (short-circuit)

The earth fault current of the load circuit is monitored.

#### LED

The LED „lGrd“ displays the message „earth current“ (see [▶Figure 19◀](#) on page 53).

A message is generated, if the error current exceeds 20 % of the amplitude of the permissible peak current of the power unit. As a cause of fault an earth fault at the motor connection is likely. The message "ready-for-use" (BBint and BBext) is withdrawn.

**Overcurrent DC-link** The level of the DC-link voltage is monitored. If the DC-link voltage reaches 840 V, a message is generated. The message "ready-for-use" is deleted.

LED The LED „UZK>“ displays „overcurrent DC-link“.

**NOTE**

The DC-link voltage can increase until switch-off, if the drive brakes.

**Overtemperature heatsink** The temperature of the heatsink is monitored.

LED At heatsink temperature > 90 °C the LED displays „temp>“ the message „overtemperature“ (see [▶Figure 19◀](#) on page 53).

The temperature sensor is situated on the heatsink.

Over X99AB:3/4 first of all the message „pre-warning“ is displayed, see [▶Pre-warning error◀](#) on page 72. Ten seconds later the message „ready-for-use is withdrawn. Therewith, in this way you can bring the connected BUS devices within 10 seconds into a defined operation condition, before the BUC doesn't supply the DC-link with energy anymore.

**CAUTION**

The following **may occur**, if you do not observe this caution information:

- property damage

*The hazard is: **temperature of the device is too high**. The maximum permissible temperature of the heatsink is 90 °C - if there is a higher temperature the device can be destructed.*

**Internal auxiliary supply** The voltage, which is necessary for the controlling of the power transistors is monitored.

LED The LED „FAG“ displays the message „mains input undervoltage“ (see [▶Figure 19◀](#) on page 53).

If the internal 24V/100kHz auxiliary supply is missing a message is generated. The message „ready-for-use“ is deleted.

**Power transistors** The collector-emitter-saturation voltage is monitored.

LEDs The LEDs „MU+“ to „MW-“ display the messages „power transistor overloaded“ (see [▶Figure 19◀](#) on page 53).

If the saturation voltage is too high, an overcurrent of the power transistor is present, for example by a short-circuit of the motor terminals, therefore the transistor is switched off and a message is generated. The message „ready-for-use is deleted.

**NOTE**

In order to guarantee a recovery of the transistor after a switching-off because of overcurrent, the message can be reset not until after five seconds (typical are 10 s).

## 8.6 Pre-warning error

### Mains input failure- and phase monitoring

This monitoring prevents the ready-for-use (internal and external), if the mains voltage is missing at least single-phase, furthermore an impulse inhibit in the BUC is generated. At active charging connection the auxiliary contact X1-6/7 is open, the release for the line contactor thereby is not active.

LED

The LED „power off“ displays the messages „mains voltage missing, at least single-phase“ (see [►Figure 19◄](#) on page 53).



#### NOTE

This message is **not** stored.

## 8.6 Pre-warning error

### 8.6.1 Power unit temperature

If the heatsink temperature exceeds 90 °C then over X99AB:3/4 (opens) at first the message pre-warning is displayed, ten seconds later the message „ready-for-use“ is withdrawn (also see [►Overtemperature heatsink◄](#) on page 71).

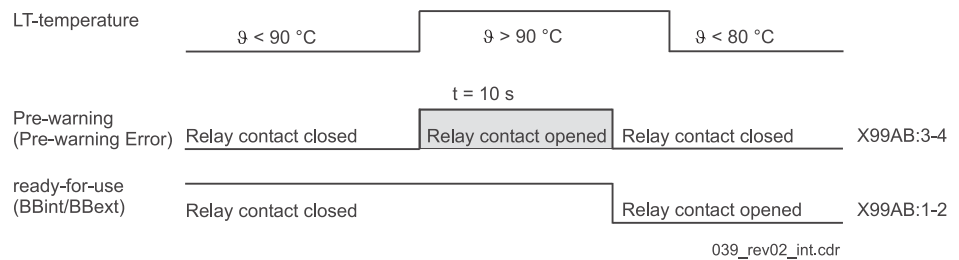


Figure 30: Pre-warning power unit temperature

### 8.6.2 PLL synchronous

The contact „pre-warning error“ X99AB:3/4 opens, if the supply module is not synchronous.



# MAINTENANCE

## 9.1 Inspection interval

---

When the surrounding air is polluted, the required coolant air quantity cannot be achieved, because the dirt will clog up the ventilation grids (variants A/S).

Even before clusters of dirt inside the appliance can block the required heat dissipation. Layers of dirt on the ventilation grids are a warning signal which you should keep an eye on.

- ▶ check the devices (e.g. air filters) within the switching cabinet which ensure the required environmental conditions and be sure to keep the maintenance intervals given by the manufacturers.
- ▶ weekly check the specified environmental conditions.

The specified environmental conditions you will find in chapter [▶Appendix D - Technical Specifications](#)◀ from page 95.

- ▶ monthly check the mixture ratio of the anticorrosive (applies to window variant F only).



## REPAIR



### DANGER

The following **will occur**, if you do not observe this danger information:

- serious personal injury
- death

Only Baumüller-personnel, that is familiar with safety notes and mounting-, operation- and maintenance instructions is allowed to repair this appliance.

*This appliance conducts dangerous voltages* - all repair jobs are to be done only when the appliance is in powerless state.

Begin to work at the DC link of the appliance only after it has been secured, that neither potential nor voltage (residual charge) is present.

Before demounting safety devices for commissioning or repair jobs, the machine/plant is to be put out of operation according exactly to the regulations. Right after the commissioning or repair job is done, all safety devices must be remounted and it must be made sure that they function correctly.



### NOTE

The operator of the machine must carry out a complete drive acceptance procedure after every intervention in the drive, no matter if its the motor, the actual value encoder or the power module. Also this has to be written down in a chronological protocol (service note-book). If this is disregarded, the operator runs the risk of liability consequences.



# SETTING OUT OF OPERATION, STORAGE

In this chapter, we describe how the BUC64S/A/F is set out of operation and the storage after.

## 11.1 Demands on the personnel

---

The personnel that you order to set the appliance out of operation, must have the required knowledge and instructions to carry out these jobs properly. The personnel is to be chosen in a way that the safety information found on the appliance, its parts and its connections are understood and observed.

## 11.2 Safety regulations

---

The sense of the safety regulations during commissioning must be applied to the set-out-of-operation procedure as well.



### DANGER

The following **will occur**, if you do not observe this danger information:

- serious personal injury
- death

*The hazard is: **Electricity**.*

Make sure that all electrical connections are switched powerless and are secured against unauthorized reactivation.

*The modules inside the appliance (e.g. condensers) can hold dangerous charges! The capacitors used inside the appliance will take at least **10 min** to become discharged by themselves.*

Before working at electrical connections check with suitable test instruments that there is no more voltage at the terminals. Only demount connections after you are sure that they are completely powerless.

### 11.3 Setting out of operation

---

The setting out of operation has the following steps:

- 1 switch to powerless state and secure against unauthorized reactivation.
- 2 (approx. 10 min after switching off) test that the connections are voltage free.
- 3 demount the connections and secure them according to the safety regulations.
- 4 (if required: demount coolant circulation connections and seal them).
- 5 make a set-out-of-operation document.

### 11.4 Demounting

---

Prerequisite for demounting is a completely documented set-out-of-operation procedure.

For the demounting, observe the same regulations and safety information as for „mounting“. Observe in particular that a BUC64S/A/F weighs between approx. 60 kg and approx. 70 kg. Supply suitable transport devices (hoisting gear, cranes, transportation personnel etc.) for transport after demounting.

Disengage all mechanical connections to the switching cabinet only after the appliance has been secured against falling off/falling down.

Keep ready suitable packing material if you intend to store the appliances. If in doubt contact Baumüller Nürnberg GmbH. During transport observe, that the appliance is not damaged by false supports or severe shocks, see also [►Packing and Transport◄](#) from page 23.

### 11.5 Storage conditions

---

The duration of the storage is unlimited if you keep the storage conditions given below:

- climatic class: 1 K 4
- temperature range: - 30 °C to + 70 °C

### 11.6 Maintenance during the storage

---

During storage there is no maintenance necessary.

### 11.7 Re-commissioning

---

- 1 When having the window variants A/F the sealing strips have to be changed.  
[►Mounting BUC64 window variant A/F◄](#) on page 41
- 2 Carry out commissioning like for a new appliance (see chapter 5 to 8).

# 12

## DISPOSAL

In this chapter we describe the correct and secure disposal of BUC64 S/A/F-appliances. During the disposal you will get mainly metal parts (iron- and non-iron metal), electronics scrap and plastics.

### 12.1 Safety regulations

---

The disposal is to be carried out only according to the safety regulations. Observe also particular local regulations. If you are unable carry out a proper disposal yourself, contact a certified disposal business.



#### CAUTION

The following **may occur**, if you do not observe this danger information:

- environmental pollution.

*The hazard is: **non-appropriate disposal.***

*During a fire dangerous materials may be generated or set free.*

Do not expose electronic modules to high temperature.

*The inner insulation of e.g. various power semiconductors holds beryllium oxide. When opened, the beryllium dust is dangerous to your health.*

Do not open modules.

### 12.2 Demands on the personnel

---

The personnel which you instruct to dispose/demount the appliance must have the knowledge and training to carry out these jobs properly. Choose the personnel in a way that it is secured that safety information on the appliance and its parts are understood and observed.

### 12.3 Disposal instructions

- Prerequisites**
- The appliance has been properly demounted.
  - All technical devices and tools required for demounting are ready-to-use and are in a good technical condition.

#### 12.3.1 Modules

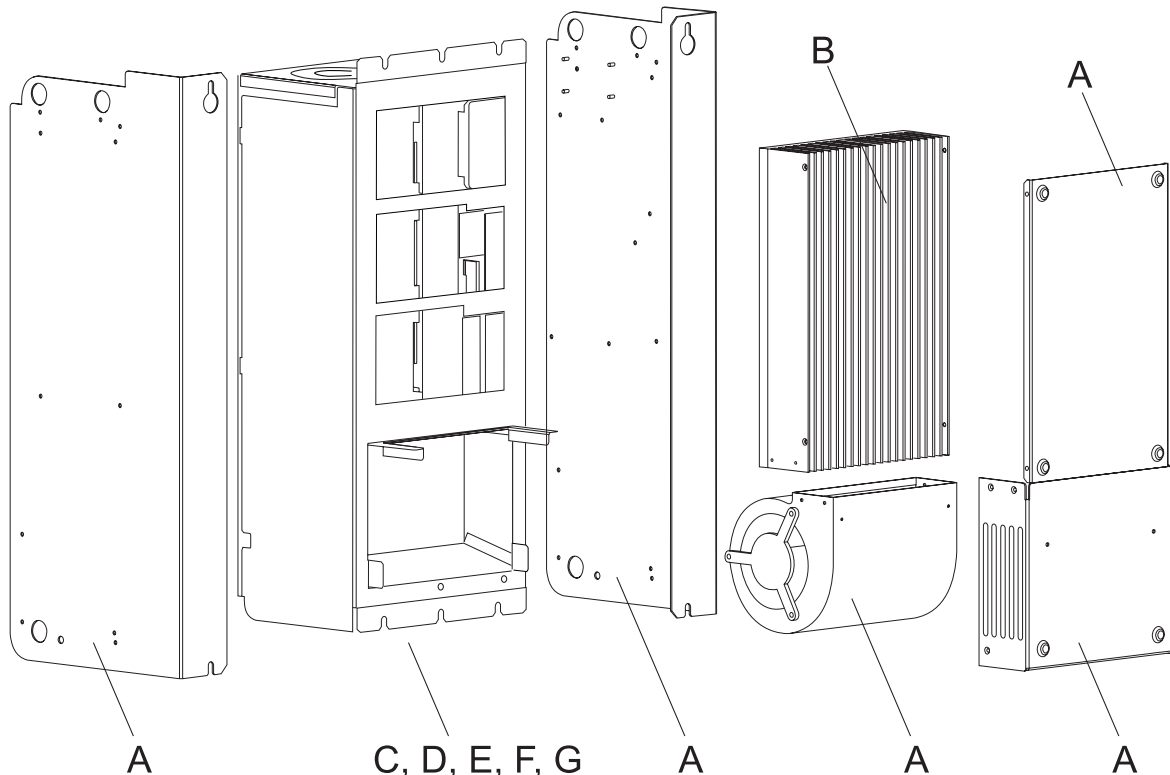


figure 31: Demounting scheme

The modules/units below given in brackets you will find in the figure above.

- sheet steel** (A) sheet steel must be given to the iron metal recycling.
- aluminium** (B) aluminium must be given to the non-iron metal recycling.
- aluminium/copper-compound** (C) aluminium/copper-compound must be given to the non-iron metal recycling.
- plastics** (D) the plastic parts of the housing, the plastic covers and other small parts made from plastic must be given to the plastics recycling.



**CAUTION**

The following **may occur**, if you do not observe this danger information:

- environmental pollution.

*The hazard is: **non-appropriate disposal.***

The following elements/modules must be handled as special waste.

---

<b>condensers</b>	<b>(E)</b> condensers must be disposed off as special waste. Observe the respective regulations.
<b>semiconductor modules</b>	<b>(F)</b> semiconductor modules must be disposed off as special waste. Observe the respective regulations.
<b>electronic scrap</b>	<b>(G)</b> the electronic scrap from PCBs, which cannot be demounted further, must be recycled as special waste. Observe the respective regulations.

## 12.4 Recycling plants / offices

---

Make sure, that the disposal is carried out according to your company's regulations and the regulations of the disposal companies and official administration. If in doubt, contact the local business administration, environmental office or other.





## APPENDIX A - ABBREVIATIONS

<b>A</b>	Current	<b>BUC</b>	Baumüller feed-/feedback unit
<b>Â</b>	Peak current, curve form not defined	<b>BUG</b>	Baumüller converter basic feed unit
<b>AAC</b>	Effective value, sinus form current	<b>BUM</b>	Baumüller single power unit
<b>ADC</b>	Effective value, direct current	<b>BUS</b>	Baumüller power module
<b>Aeff</b>	Current, curve form not defined	<b>CPU</b>	Central processing unit
<b>+ I<sub>Aist</sub> </b>	Absolute value of armature current actual value (pos. signal)	<b>DA</b>	Digital/analog
<b>AO</b>	Function module Analog Outputs	<b>DAC</b>	Digital/analog converter
<b>AC</b>	Alternating current	<b>DB</b>	Data byte (8 bit)
<b>ADR</b>	Adress byte	<b>DC</b>	► Direct current ► Drive-Control
<b>AI</b>	Function module Analog Inputs	<b>DE</b>	Function module Digital Inputs
<b>AK</b>	Request-/answer code	<b>DES</b>	Digital input actuator
<b>AM</b>	► Asynchronous motor ► Function module Drive-Manager	<b>DIN</b>	'Deutsches Institut für Normung e.V.', German institution for standardization
<b>ASF</b>	Armature contactor enable	<b>DOPPELW</b>	Double word (32 bit)
<b>BAPS</b>	Baumüller drives parallel interface	<b>DSV</b>	Function module Data Set Management
<b>BASS</b>	Baumüller drives serial interface	<b>DW</b>	Data word (16 bit)
<b>BB</b>	Ready for operation	<b>DWort</b>	Double word (32 bit)
<b>BBext</b>	Readiness for operation (external)	<b>EMK</b>	Electromagnetic constant
<b>BBint</b>	Readiness for operation (internal)	<b>EMC</b>	Electromagnetic compatibility
<b>BCC</b>	Block check character	<b>EN</b>	European standard
<b>BE</b>	► Component (corresp. to "UU") ► Operator's station	<b>EOF</b>	End of file
<b>BEDAS</b>	Operating data memory	<b>ES</b>	Function module Incoming Feeder
<b>BOF</b>	Begin of file	<b>Ext</b>	Function module Current Monitoring
<b>BS</b>	Function module operating system	<b>EXT, ext</b>	External
<b>BSA</b>	Analog reference potential	<b>FBS</b>	BEDAS missing
<b>BSD</b>	Digital reference potential	<b>FI</b>	Fault current
<b>BSE</b>	External reference for 24 V controller inputs	<b>FLG</b>	Error position encoder signal
<b>BUB</b>	Ballast unit		

<b>FPH</b>	Missing phase	<b>M</b>	Function module Drive-Manager
<b>FTO</b>	Error tacho signal	<b>M24</b>	Reference potential 24 V
<b>GL</b>	Technology module Synchronous Operation	<b>MM</b>	► Function module Motor Model ► Torque detector
<b>GRE</b>	Rectifier end position	<b>\$</b>	Prefix for hexadecimal number
<b>HE</b>	Mains contactor ON	<b>Mot</b>	Function module Field Angle Computing
<b>HLG</b>	Function module Ramp-function Generator	<b>MR1</b>	Torque direction 1
<b>HM</b>	Main menu	<b>MR2</b>	Torque direction 2
<b>HS</b>	Mains contactor	<b>MT</b>	Function module Motor Temperature
<b>HSE</b>	Mains contactor ON	<b>mtr.</b>	Medium time-lag fuse
<b>HSF</b>	Mains contactor enable	<b>n = 0</b>	Speed = 0
<b>HW</b>	► High word ► Hardware	<b>N</b>	Function module Speed Controller
<b>I</b>	Function module Current Control	<b>n<sub>ist</sub></b>	Speed actual value
<b>I2t</b>	Function module Overload Monitoring	<b>n<sub>max</sub></b>	Maximum speed
<b>I<sub>Aist</sub></b>	Armature current actual value	<b>n<sub>min</sub></b>	Minimum speed
<b>IKG</b>	Function module Incremental encoder	<b>NMX</b>	Maximum speed exceeded
<b>ID-Nr.</b>	Identification number	<b>NN</b>	Altitude above sea level
<b>I<sub>F</sub></b>	field current	<b>n<sub>SG</sub></b>	Creep feed speed
<b>I<sub>Fmax</sub></b>	Maximum field current (rated current)	<b>n<sub>soll</sub></b>	Speed setpoint value
<b>I<sub>Fmin</sub></b>	Minimum field current	<b>P</b>	Identification number
<b>I<sub>Fsoll</sub></b>	Filed current setpoint value	<b>PBE</b>	Parameter description
<b>Inc</b>	Counting unit of position encoder	<b>PELV</b>	Protective extra-low voltage
<b>IND</b>	Index	<b>PKE</b>	Parameter identifier
<b>Ink</b>	Stroke character number of incremental encoder	<b>PKW</b>	Parameter identifier value
<b>INK.</b>	Incremental	<b>PNU</b>	Parameter number
<b>IPM</b>	Intelligent power module	<b>POS</b>	Technology module Positioning
<b>I<sub>soll</sub></b>	Armature current setpoint value	<b>PWE</b>	Parameter value
<b>IW</b>	Actual value	<b>PWM</b>	Function module Pulse-width Modulation
<b>IWK</b>	Actual value channel	<b>PZD</b>	Process data
<b>IxR<sub>service</sub></b>	IxR-compensation with "service"	<b>R</b>	Reserved
<b>IxR<sub>creep speed</sub></b>	IxR-compensation with "creep speed"	<b>R<sub>A</sub></b>	Armature resistance
<b>IZK</b>	Overcurrent in DC link	<b>RA</b>	Function module Relais Output
<b>KT</b>	Function module Coordinate Transformation	<b>Res</b>	Function module Resolver Evaluation
<b>L</b>	Function module Position Control	<b>RF</b>	Controller enable
<b>LED</b>	Light-emitting diode	<b>RS</b>	Controller blocking
<b>LGE</b>	Telegram length	<b>SE</b>	Screen earthing
<b>LT</b>	Function module Power Module	<b>SELV</b>	separated extra low voltage system
<b>LW</b>	Low word	<b>SF</b>	Following error
		<b>SGR</b>	Current limit reached
		<b>SH</b>	Quick stop

<b>SL</b>	Protective earth conductor
<b>SM</b>	Synchronous motor
<b>STX</b>	Start of text
<b>SV</b>	Function module Service Interface
<b>SW</b>	► Setpoint value ► Software
<b>SWG</b>	Function module Setpoint Value Generator
<b>SWK</b>	Setpoint value channel
<b>TBA</b>	Overtemperature ballast resistor
<b>TKK</b>	Overtemperature heat sink
<b>TM</b>	Temperature of motor
<b>TMO</b>	Overtemperature of motor
<b>U</b>	Voltage
<b>U<sub>A</sub></b>	Armature voltage
<b>UM</b>	Submenu
<b>USS</b>	Function module USS-protocol
<b>UVS</b>	Supply voltage too low
<b>USS<sup>®</sup></b>	Siemens trademark universal serial interface
<b>U<sub>ZK</sub></b>	DC link voltage, intermediate circuit voltage
<b>V</b>	Voltage
<b><math>\hat{V}</math></b>	Peak voltage
<b>V<sub>AC</sub></b>	Effective value, sinus form voltage
<b>VBG</b>	“Verwaltungs-Berufsgenossenschaft“, German management occupation-cooperative
<b>V<sub>DC</sub></b>	Effective value, direct current voltage
<b>VDE</b>	“Verband deutscher Elektrotechniker“ German electrical engineer connected
<b>VE</b>	Logic element
<b>V<sub>eff</sub></b>	Voltage, curve form not defined
<b>WRE</b>	Inverter limit position
<b>X</b>	Terminal strip
<b>ZK</b>	DC link, intermediate circuit





## APPENDIX B - ACCESSORIES

### B.1 EMC accessories

Screen terminals for grounding			
<p>cable-Ø 2 x 2 - 6 mm</p> <p>Article no. 226 752</p>		<p>cable-Ø 3 - 8 mm</p> <p>Article no. 226 741</p>	
<p>cable-Ø 4 - 13.5 mm</p> <p>Article no. 226 745</p>		<p>cable-Ø 10 - 20 mm</p> <p>Article no. 226 749</p>	

### B.2 Connectors

Article	Article no.	manufacturer - order no. / type
male connector for X99A	00309455	Phoenix Contact - MVSTBW 2,5/6-ST
male connector for X99B	00309454	Phoenix Contact - MVSTBR 2,5/6-ST
male connector for X1	00362559	Phoenix Contact - PC 4/7-STF-7,62

#### B.2.1 Semic line fuse (F3, ▶Figure 4◀ on page 29)

SITOR	1	450A/1000V: 3NE3 233	aR	size 1	110 mm
	2	450A/1000V: 3NE3 333	aR	size 2	110 mm

size ↑




#### NOTE

The fuses are not suitable for switch disconnectors.



### B.3 Line reactor

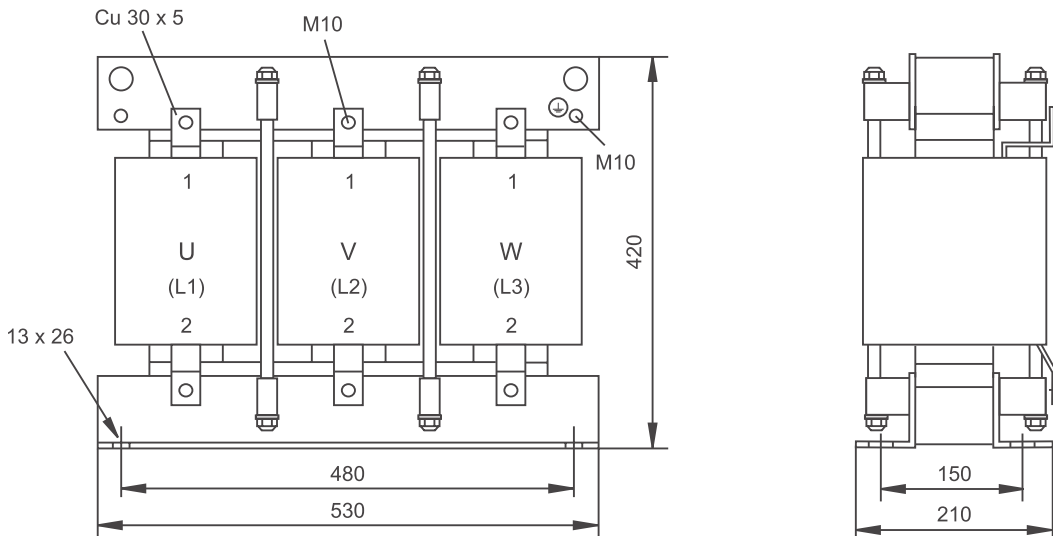

Rated current: 300 Aeff  
 Rated voltage: 3 x 400 Veff - 460 Veff ± 10%  
 Frequency: 50/60 Hz  
 Total loss: 1 kW

Degree of protection: IP 00

Weight: 120 kg

Article no.: 00363544

### B.4 Water cooler

seal tape: part number 00350790

coupling (connection accessory): contact Baumüller Nürnberg GmbH.





# APPENDIX C - DECLARATION OF CONFORMITY / BY MANUFACTURER

In this section we provide general information about EU directives, the CE symbol and the Declaration of Conformity/by Manufacturer.

## C.1 What is an EU directive?

---

EU directives specify requirements. The directives are written by the relevant bodies within the EU and are implemented by all the member countries of the EU in national law. In this way the EU directives guarantee free trade within the EU.

An EU directive only contains essential minimum requirements. You will find detailed requirements in standards, to which references are made in the directive.

## C.2 What the CE symbol indicates

---

a) *The CE marking symbolizes conformity to all the obligations incumbent on manufacturers for the product by virtue of the Community directives providing for its affixing.*

...

b) *The CE marking affixed to industrial products symbolizes the fact that the natural or legal person having affixed or been responsible for the affixing of the said marking has verified that the product conforms to all the Community total harmonization provisions which apply to it and has been the subject of the appropriate conformity evaluation procedures.*

...

*Council Decision 93/465/EEC, Annex I B. a) + c)*

We affix the CE mark to the equipment and to the documentation as soon as we have established that we have satisfied the requirements of the relevant directives.

All converters and control systems supplied by the Baumüller Nürnberg GmbH satisfy the requirements of 73/23/EEC (Low Voltage Directive).

As all converters and control systems comply with the requirements of the harmonized standards EN50178, EN 60204-1, EN 60529 and HD625.1 S1, the protection targets of 73/23/EWG are reached.

With specified application of this Baumüller equipment in your machinery, you can act on the assumption that the equipment satisfies the requirements of 98/37/EG (machinery directive). Therefore the equipment is developed and constructed in such a way, that the requirements of the harmonized standard EN 60204-1 can be met by the electrical installation.

Compliance with 89/336/EEC (EMC Directive) depends on how the equipment is installed. Since you are performing installation yourself, it is you who are responsible for complying with 89/336/EEC.

A declaration of conformity on the EMC directive therefore cannot be issued.

We will provide you with support in the form of EMC information. You will find this information in the operating manual and in “filters for main applications”. When you have complied with all the requirements we impose in this documentation, you can assume that the drive satisfies the requirements of the EMC Directive.

The limit values and requirements for variable-speed electrical drives are determined in the harmonized product standard EN61800-3. If you are erecting an installation, for which a declaration of conformity on the EMC directive must be generated, it may be necessary to specify several harmonized standards, which you have used for the compliance of the protection targets of the directive. The harmonized product standard EN 61800-3 has to be used with electrical drives.

To enable you to market your machine within the EU, you must be in possession of the following:

- Conformity mark (CE mark)
- Declaration(s) of Conformity regarding the directive(s) relevant to the machine

---

### **C.3 Definition of the term Declaration of Conformity**

---

A Declaration of Conformity as defined by this documentation is a declaration that the electrical equipment brought into circulation conforms to all the relevant fundamental safety and health requirements.

By issuing the Declaration of Conformity in this section the Baumüller Nürnberg GmbH declares that the equipment conforms to the relevant fundamental safety and health requirements resulting from the directives and standards which are listed in the Declaration of Conformity.

---

### **C.4 Definition of the term Declaration by Manufacturer**

---

A Declaration by Manufacturer as defined by this documentation is a declaration that the machine/safety component brought into circulation conforms to all the relevant fundamental safety and health requirements.

By issuing the Declaration of Conformity in this section the Baumüller Nürnberg GmbH declares that the equipment conforms to the relevant fundamental safety and health requirements resulting from the directives and standards which are listed in the Declaration of Conformity .

The Baumüller equipment is integrated into a machine. For health and safety, of the users for example, it is important for the entire machine to conform to all the relevant fundamental safety and health requirements. For this reason the Baumüller Nürnberg GmbH draws attention in the Declaration by Manufacturer to the fact that it is prohibited to put the machine as a whole into operation before it has been declared that the machine conforms to the provisions of the Machinery Directive.

C.5 Declaration of Conformity

# EU-Konformitätserklärung

## Declaration of Conformity

gemäß EU-Richtlinie 73/23/EG (Niederspannung) vom 19.02.1973  
geändert durch: 93/68/EWG vom 22.07.1993

in accordance with EC directive 73/23/EG (low voltage) dated 19.02.1973  
changed by: 93/68/EWG dated 22.07.1993

**BUC64S/A/F    BUC64X - XXX/X XX - XX - X - X - XXX**

Das obige Gerät wurde entwickelt und konstruiert sowie anschließend gefertigt in Übereinstimmung mit o.g. EU-Richtlinie und u.g. Normen in alleiniger Verantwortung von:  
the unit specified above was developed and constructed as well as manufactured in accordance with the above mentioned directive and the standards mentioned below under liability of:


**Baumüller Nürnberg GmbH, Ostendstr. 80 - 90, D-90482 Nürnberg**

Berücksichtigte Normen - standards complied with:


Norm / standard

EN 50178	Ausrüstung von Starkstromanlagen mit elektrischen Betriebsmitteln Electronic equipment for use in power installations
EN 60204-1	Sicherheit von Maschinen - Elektrische Ausrüstung von Maschinen Safety of machinery - Electrical equipment of machines
EN 60529	Schutzarten durch Gehäuse (IP Code) Degrees of protection provided by enclosures (IP Code)
HD 625.1 51	Isulationskoordination für elektrische Betriebsmittel in Niederspannungsanlagen Insulation coordination for equipment within low-voltage systems

Nürnberg, 11.01.2005

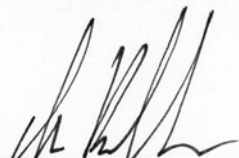  
 Andreas Baumüller  
 Geschäftsführer  
 Head Division

*16.02.2005*

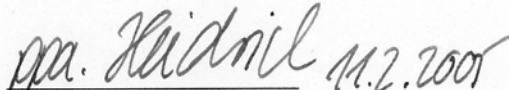  
 ppa. Dr. Peter Heidrich  
 Entwicklungsleiter  
 Head of development

## C.6 Declaration by Manufacturer

# EU-Herstellererklärung

## Declaration by Manufacturer

gemäß EU-Richtlinie 98/37/EG (Maschinen) vom 22.06.1998

geändert durch: 98/79/EG vom 27.10.1998

in accordance with EC directive 98/37/EG (machinery) dated 22.06.1998

changed by: 98/79/EC dated 27.10.1998

**BUC64S/A/F            BUC64X - XXX/X XX - XX - X - X - XXX**

Die Inbetriebnahme der Maschine, in die dieses Gerät eingebaut wird, ist untersagt bis die Konformität der Maschine mit der genannten Richtlinie erklärt ist.

The machinery into which this unit is to be incorporated must not be put into service until the machinery has been declared in conformity with the provisions of the directive mentioned.

Bei der Entwicklung und Konstruktion des Gerätes wurden folgende Normen beachtet:


The development and construction of the unit is complied with following standards:


Norm / standard

EN 60204-1	Sicherheit von Maschinen - Elektrische Ausrüstung von Maschinen Safety of machinery - Electrical equipment of machines
------------	---

**Baumüller Nürnberg GmbH, Ostendstr. 80 - 90, D- 90482 Nürnberg**

Nürnberg, 11.01.2005

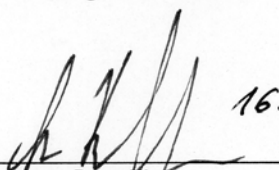  
 16.02.2005  
 Andreas Baumüller  
 Geschäftsführer  
 Head Division

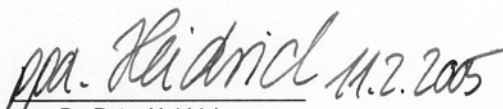  
 ppa. Dr. Peter Heidrich  
 Entwicklungsleiter  
 Head of development



# APPENDIX D - TECHNICAL SPECIFICATIONS

In this chapter you will find an overview of the technical specifications. Some of these data we have been using before in the previous chapters at the respective places.

## D.1 Requirements on the power supply

---

Control voltage <sup>1)</sup> ( $U_{DC}$ )	+ 24 V DC -10 % / +20 % <sup>2)</sup>
--	---------------------------------------

<sup>1)</sup> The supply voltage must meet the requirements of PELV (EN 50178, chapter 3.49) or SELV (EN 50178, chapter 3.70).

<sup>2)</sup> EN6 1131-2:1994, table 7

## D.2 Burst immunity

---

Signal interfaces	1 kV
Power interfaces	2 kV

## D.3 Required environmental conditions

### D.3 Required environmental conditions


Transport temperature range	- 30 °C to + 70 °C
Transport climatic class	2 K 3 <sup>1)</sup>
Storage temperature range	- 30 °C to + 70 °C
Storage climatic class	1 K 4 <sup>1)</sup>
Operational surrounding	outside populated areas <sup>2)</sup>
Operation temperature range	min. 0 °C to max. 55 °C <sup>2)</sup>
Operation climatic class	3 K 3 <sup>1)</sup>
Mounting height <sup>4)</sup>	up to 1000 m above sea level (rated service)
Relative humidity (operation)	5 % to 85 % no condensation <sup>1)</sup>
Ionizing and non-ionizing radiation	no limits
Vibration, shock and continuous shock	max. 1 g <sup>5)</sup>
Degree of pollution	2 <sup>6)</sup>
Air ventilation temperature <sup>8)</sup>	min. 0 °C to max. 55 °C <sup>3)</sup>
Water cooling temperature <sup>7)</sup>	min. "Air ventilation temperature <sup>9)</sup> " up to max. 60 °C
Air ventilation through appliance (without heatsink)	300 m <sup>3</sup> / h
Air ventilation through heatsink	800 m <sup>3</sup> / h
Cooling water flow rate <sup>7)</sup>	min. 4 l/min. up to max. 10 l/min.
Cooling water pressure <sup>7)</sup>	max. 6 bar
Temperature difference (Coolant intake to -outlet)	4 K at 4 l/min in rated service
Pressure loss at Water cooler <sup>7)</sup> <sup>10)</sup>	1.15 bar at 4 l/min

<sup>1)</sup> EN 50178, table 7

<sup>2)</sup> when operated in populated areas you will have to experience high frequency disturbances (acc. to EN 61800-3, 6.4.2.1)

<sup>3)</sup> 40 °C is the rated temperature

<sup>4)</sup> characteristic curve: power output of appliance in dependence of mounting height at normal pressure

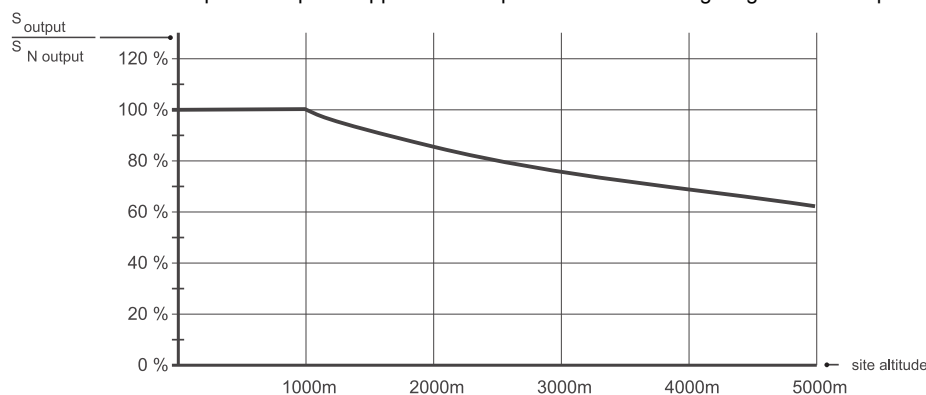


<sup>5)</sup> EN 50178, chapter 9.4.3.2

<sup>6)</sup> EN 50178, table 2



- 7) As coolant use clear, suspended matter- and dirt-free, desalinated and demineralized water. The water may hold a maximum of 100 ppm (0.01%) sodium chloride (salinity). Mix in an anticorrosive. The total water hardness must be between 8° and 14° dH (1° dH = 0.179 mmol Ca<sup>2+</sup>/l). A pH-value between 6.5 and 7.5 must be kept. Use a closed loop coolant circulation!
- 8) Air inside and outside switching cabinet.
- 9) Air inside switching cabinet.
- 10)

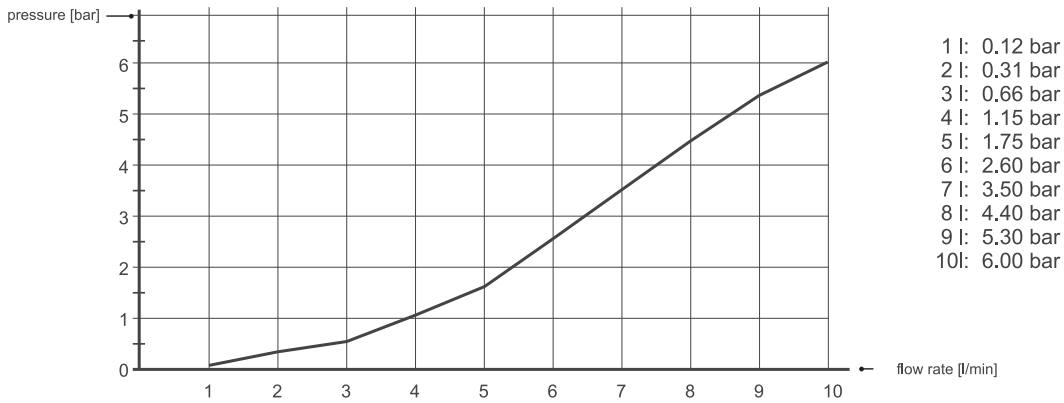

### D.4 Electrical specifications

	<b>BUC64S/A/F</b>
Mains	Industrial system with solid- or low-impedant grounded neutral system (TN-mains or TT-mains)
Mains input voltage	3 x 400 V <sub>AC</sub> - 460 V <sub>AC</sub> ±10 %
Mains frequency	47Hz ... 63Hz
Mains voltage - unsymmetry	max. 3% <sup>8)</sup>
Voltage - drop, drop - depth	< 40 %, area < 250 % x Grad <sup>9)</sup>
Harmonic oscillation	THD < 10% <sup>7)</sup>
Rated input current <sup>1)3)4)</sup> (I <sub>AC_N</sub> ) at 4 kHz <sup>2)</sup>	315 A <sub>AC</sub>
Peak input current <sup>1)3)5)</sup> (I <sub>AC_max</sub> ) at 4 kHz <sup>2)</sup>	390 A <sub>AC</sub>
DC link installed load P <sub>zk_out_N</sub> (1C1 / 1D1) <sup>10)</sup>	165 kW
DC link peak load P <sub>zk_out_N</sub> (1C1 / 1D1) <sup>11)</sup>	310 kW
DC link voltage <sup>1)</sup>	760 V <sub>DC</sub>
DC link capacity (internal)	6000 μF/900 V
Max. DC link capacity (external)	12000 μF/900 V
Power dissipation "power unit" <sup>1)</sup> Power dissipation "inside unit" (with controller, without ventilator)	3000 W 250 W
Rated input current of 24 V	2,5 A
Control voltage of charge contactor	24 V <sub>DC</sub> (internal supplied)
Control voltage of main contactor	230V <sub>AC</sub> , max. 1 A <sub>AC</sub>
Ventilator connection voltage <sup>6)</sup>	230 V <sub>AC</sub> +5 % -10 % 50/60 Hz
Ventilator power <sup>6)</sup>	max. 200 W

1) All rated values with respect to a mains input voltage of 400 V<sub>AC</sub> and a switching frequency of 4 kHz.

2) Switching frequency of converter. See also operating instructions of controller.

3) Effective value at an environmental temperature of 40 °C.

4) Between 40 °C and 55 °C the output power (peak power, DC link) has to be reduced by 3 %/°C. This can only be reached by accordant parameterization of the connected axes.

5) The axis connected must be adjusted in a way, that the peak output power (DC link peak load) will be required not longer than for 120 s only. See BUS-axis manual.

6) For cooling variants S and A only.

7) EN 61800-3, chapter 5.2.1, class 3

8) IEC 1000-2-4, Tab. 1, class 3

9) EN 61800-3, chapter 5.2.2

10)  $P_{zk\_out\_N} = P_{1N} - \Delta P_{Line\ reactor} - \Delta P_{Switching\ loss}$ , with  $P_{1N} = 1,73 \times U_{1N} \times I_{AC\_N}$  and  $U_{1N} = 400V_{AC}$ .  
With the continuous permitted DC-link power supply capacity P<sub>zk\_out\_N</sub> the system current I<sub>AC\_N</sub> with a line supply voltage of 460V<sub>AC</sub> grows smaller by the ratio 400/460 = 0,87 (instead of 300A<sub>AC</sub> the system current now is 260A<sub>AC</sub>). At the choice of the axes (BUS devices) it has to be assured, that P<sub>zk\_out\_N</sub> is not exceeded.

11)  $P_{zk\_out\_max} = P_{1max} - \Delta P_{Line\ reactor} - \Delta P_{Switching\ loss}$ , with  $P_{1max} = 1,73 \times U_{1N} \times I_{AC\_max}$  and  $U_{1N} = 400V_{AC}$ .  
This power withdrawal is only permitted over short duration (max. 120 s). This has to be assured by accordant parameterization of the connected axes (BUS devices). DC-link (see manual of the BUS devices).

## D.5 BUC64S - non-electrical data

Dimensions (W x H x D)	448 x 920 x 304 mm
Weight without controller	approx. 70 kg
Degree of protection	IP 00
Fight fire with	ABC-Powder

## D.6 BUC64A - non-electrical data

Dimensions (W x H x D)	490 x 885 x (244+90) mm <sup>1)</sup>
Weight without controller	approx. 65 kg
Degree of protection	IP 00/IP 44 outside
Fight fire with	ABC-Powder

<sup>1)</sup> The first value is the depth inside the switching cabinet. The second value is the depth outside the switching cabinet.

## D.7 BUC64F - non-electrical data

Dimensions (W x H x D)	490 x 885 x (244+30) <sup>1)</sup> mm
Weight without controller	approx. 60 kg
Degree of protection	IP 00/IP 54 outside
Fight fire with	ABC-Powder

<sup>1)</sup> The first value is the depth inside the switching cabinet. The second value is the depth outside the switching cabinet.

## D.8 Cable for control voltage supply / signals

### D.8 Cable for control voltage supply / signals


Cross-section	0.2 to 2.5 mm <sup>2</sup> (w/o end sleeve) 0.25 to 2.5 mm <sup>2</sup> (with end sleeve) (AWG 24 to 12)
Maximum length	any
End sleeve, connection to appliance	flexible, with or without end sleeve

### D.9 Cable for mains supply to appliance

Cross-section <sup>1)</sup>	depending on connection
Cable type	screened, shield's degree of coverage > 85 % after mains filter
Cable lug / end sleeve, connection to appliance <sup>2)</sup>	cable lug

<sup>1)</sup> EN 60204-1, tab. 5, attachment form C.

<sup>2)</sup>

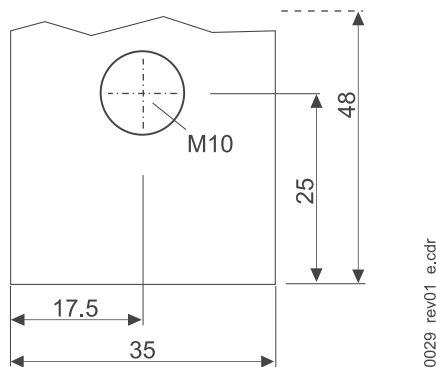

Mount max. 2 cable lugs per power rail. Do not mount cable lugs onto each other, mount one on each side of the power rail. Use cable lugs that have a maximum width of 35 mm. Keep in mind that the M10 screw is used for attachment.



## Table of figures

Cooling variants .....	26
hazardous areas .....	27
type shield with type key .....	28
Block switching diagram BUC64S/A/F .....	29
Connections of BUC - BUS .....	30
Construction diagram BUC64-300A/390A part 1 .....	31
Construction diagram BUC64-300A/390A part 2 .....	32
Example for Power On/Off control .....	33
Hazardous areas during mounting .....	35
Dimensional drawing of BUC64S/A/F .....	37
Drilling figure of BUC64S/A/F .....	38
Mounting instruction of BUC64S .....	40
Mounting instruction BUC64 window variant A/F .....	42
hazardous areas .....	47
Power terminals .....	48
Control terminal X99A .....	50
Control terminal X99AB .....	51
potential free optocoupler input .....	51
LED display .....	53
Cabling suggestion for BUC64S/A/F .....	55
reducing effective antenna height .....	56
reducing loop areas .....	56
contacting cable screens when routing through cabinet panels .....	57
cable screening when exiting a cabinet .....	58
screen contact on both sides of a line .....	58
Proposal for the screen connection .....	59
BUC64S/A/F connection diagram .....	61
Monitoring functions and „ready-for-use“ .....	68
Ready-for-use-messages BUC 64 .....	70
Pre-warning power unit temperature .....	72
Demounting scheme .....	80



## Table of figures

---



# Index

## Symbols

73/23/EWG

91

## A

Abbreviations

83

## B

Baumüller

11, 23

## C

Cable

100

Cable requirements

47

Cabling

54

Connecting the coolant circulation

44

Connection

DC link

98

Connections

48

coolant circulation

44

## D

danger information

7

Dangers when handling

8

Declaration of conformity

91

dimensional drawings

37

Discharge currents

59

Disposal

24

drilling figures

38

## E

Education

20

EMC information

54

environmental class

24

Environmental temperature

96

## F

First steps

7

## G

Grounding

57

Guarantee

8

## H

Harmonic oscillation

98

## I

Introduction

7

## L

Low Voltage Directive

91

low voltage supply

95

## M

max. DC link voltage

49

Maximum temperature

71

Mounting height

96

## N

non-electrical data

99

## O

Obligation and liability

7

Overtemperature

71

## P

packaging

24

personnel

7, 20, 63

Power dissipation

98

Power terminals

48

## Q

Qualified personnel

20

## R

reconstruction

8, 20

Requirements, personnel

63

Reset

25

## S

safety information

7

Screening

58

Space requirements

37

## T

temperature interval

24

Terms used

7

type key

28

## U


unsymmetry

98

## V

Voltage - drop

98




## Index

---





**be in motion**

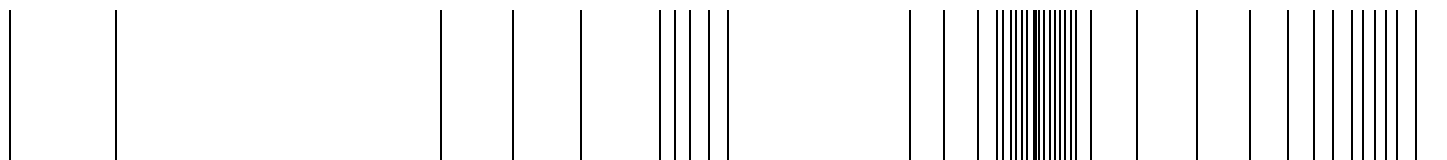

Baumüller Nürnberg GmbH Ostendstraße 80-90 90482 Nürnberg T: +49(0)911-5432-0 F: +49(0)911-5432-130 [www.baumueller.de](http://www.baumueller.de)

All information given in this manual is customer information, subject to change without notice. We reserve the right to further develop and actualize our products continuously using our permanent revision service. Please notice, that specifications/data/information are current values according to the printing date. These statements are not legally binding according to the measurement, computation and calculations. Before you make any information given in this manual to the basis of your own calculations and/or applications, please make sure that you have the latest edition of the information in hand. No liability can be accepted concerning the correctness of the information.